



Talos T6/T8™ Coupon Guide

Carefully cut coupon from this page or make one copy of this coupon.

Copies are usable if made on a standard, carbon-based copier. Make one copy of the original at a time, as copiers tend to reduce the size of the coupon when multiple copies are made.


Fill out the coupon using a #2 (HB) pencil. Fill in one block for each line. Do not mark the back of the coupon.

Note that Talos units are preconfigured with the following options enabled:

- Bill Ways Accepted: Four Way
- T6 Bills Enabled: \$1 - \$20
- T8 Bills Enabled: \$1 - \$100
- Pulse Width: Gaming Short
- Pulses Per Dollar: One
- Interface Mode: Harness Enable
- Acceptance Mode: Mode Zero

Initiating Coupon Mode

1. Remove the bill magazine
2. Use a pencil or a screwdriver to press this button to enter configuration mode, then reattach the bill magazine to initiate Coupon mode:

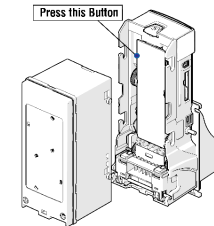

When coupon mode is activated, the bezel lights will rapidly flash

1. Insert a completed configuration coupon
2. Watch the bezel LEDs and count the flashes when the configuration coupon is returned
3. Use this chart to confirm successful programming:

Flashes	Meaning
10	Configuration coupon accepted and unit successfully programmed.
1 - 5	Coupon rejected. Number of flashes corresponds to the coupon section that was improperly filled out. Try again.
7	Coupon not read. Confirm the coupon correct and try again.

This space is left intentionally blank.

