

Models - 8685-2G, 8685-2GVR, 8685-2GW, 8685-2GWVR, 8685-2GVR-1, 8685-2GWVR-1, 8685-2FG, 8685-2FGW

- Page 3 Specifications
- Page 4 Important Safety Instructions
- Page 5 Product Dimensions
- Page 6-10 Installation
- Page 11 Timer Set-Up
- Page 12 Operating Instructions & Maintenance
- Page 12-13 Troubleshooting
- Page 14-24 Parts List
- Page 25 Wiring Diagram

# **PRODUCT INFORMATION**

Please take a moment to fill out the information below in order to aid us with any future sales or service inquiries. Model number and serial number information can be found on the serial tag located inside the control box and/or on the lower exterior of the can. Key number can be found on the tag that comes attached to the keys. There may be more than one key number depending on unit.
Please keep this information with your records.
MODEL#:
SERIAL#:
KEY NUMBER(S):
DATE PURCHASED:
DISTRIBUTOR:
J.E. Adams Industries 1025 63rd Ave. S.W. Cedar Rapids, IA 52404 1-800-553-8861 <u>www.jeadams.com</u>

## Specifications

Unit specifications:	8685-2G, 8685-2GVR, 8685-2GW, 8685-2GWVR, 8685-2GWVR- 1 & 8685-2GVR-1, 8685-2FG, 8685-2FGW		
Voltage:	120vac, 60hz		
Amperage:	(1) 10 amp service is required		
Compressor:	<sup>3</sup> ⁄ <sub>4</sub> hp, twin cylinder models		
Water Solenoid:	120vac, 60hz		
Timer:	SSAC		
Weight:	57 lbs, no packaging		
DUTY CYCLE: 3.2 minutes on, 3.2 minutes off.			

### NOTE: "UNIT INTENDED FOR COMMECIAL USE ONLY"

### **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be followed, including the following:

#### **READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)**

#### WARNING – To reduce the risk of fire, electric shock, or injury:

- Use only as described in manual. Use only manufactures recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dirt and anything that may reduce flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use near flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use near anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Products such as "Fix-A-Flat" are highly combustible and cannot be used in conjunction with air machine!





SAVE THESE INSTRUCTIONS





- Installation Instructions:
- Determine location to mount unit ("DANGER" "THIS EQUIPMENT INCORPORATES PARTS SUCH AS SWITCHES, MOTORS, OR THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS THAT CAN CAUSE AN EXPLOSION. WHEN LOCATED IN GASOLINE-DISPENSING AND SERVICE STATIONS INSTALL AND USE AT LEAST 20 FEET (6 M) HORIZONTALLY FROM THE EXTERIOR ENCLOSURE OF ANY DISPENSING PUMP AND AT LEAST 18 INCHES (450 MM) ABOVE A DRIVEWAY OR GROUND LEVEL."
- Run electrical service to that location.
- **Grounding Instructions**: This appliance must be connected to a grounded metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.
- All local and national electric codes must be followed for installation and use.
- Licensed electricians are recommended for installation.


### **PRODUCT DIMENSIONS**

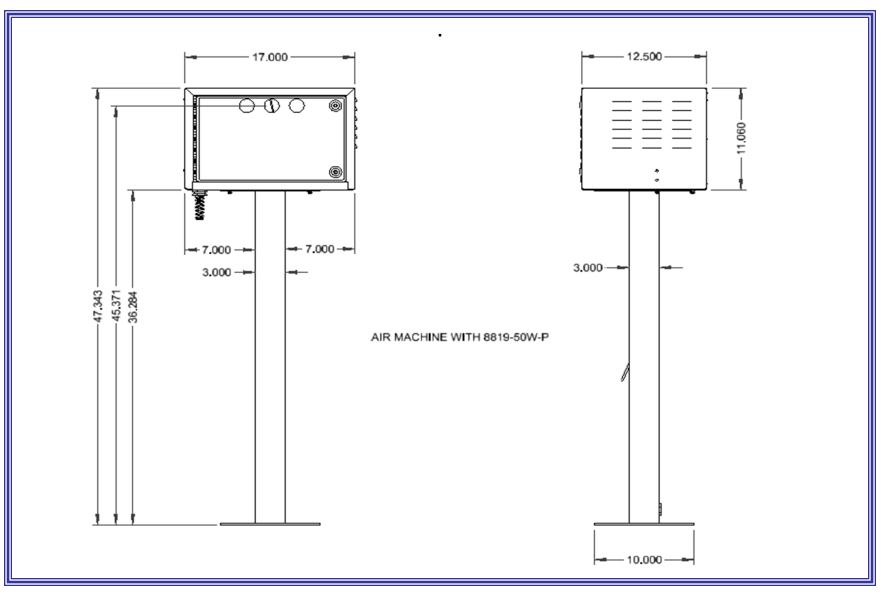


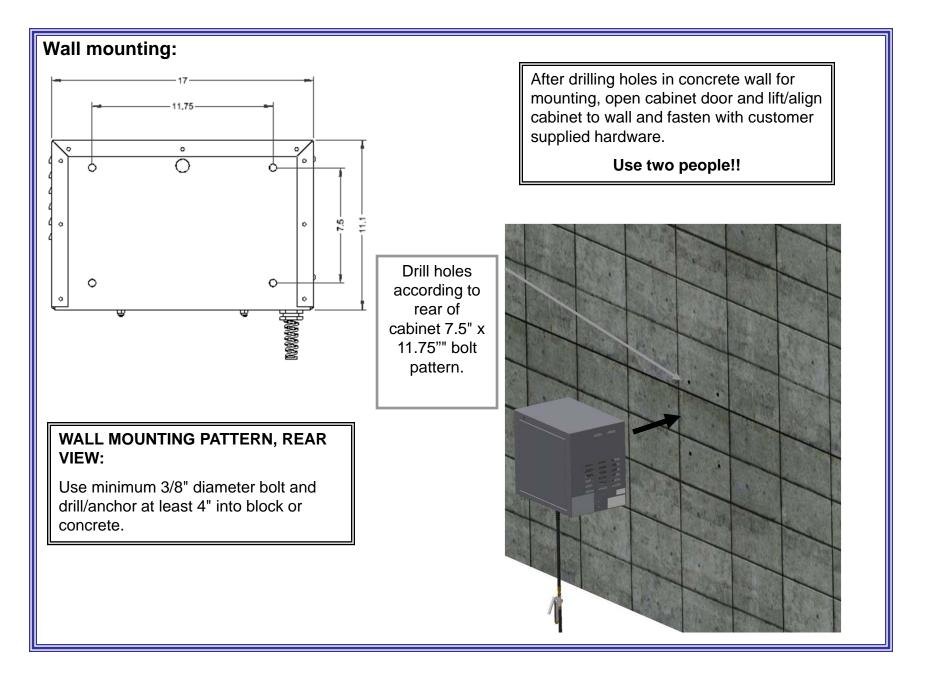

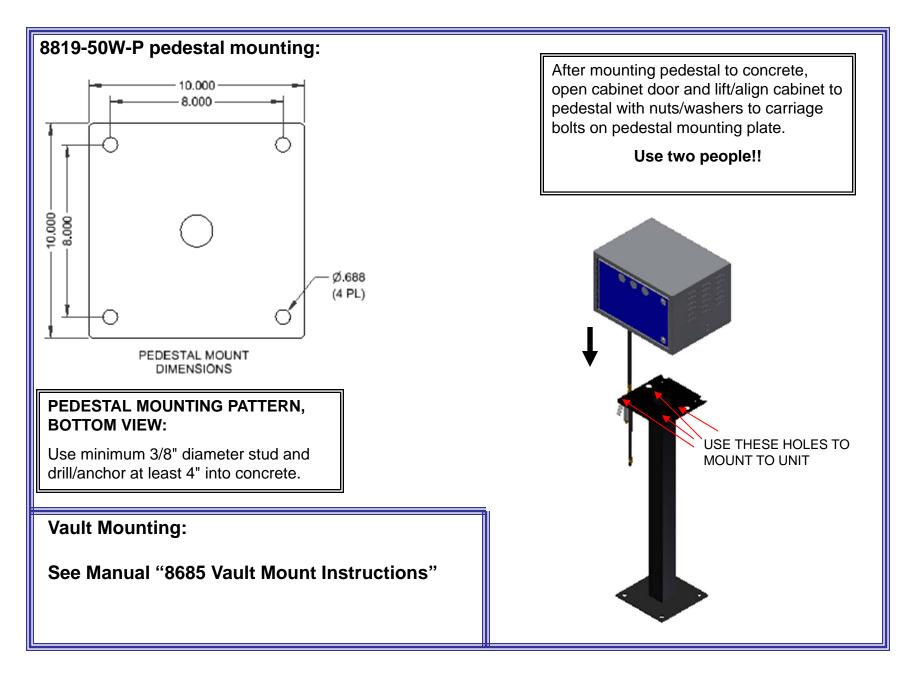

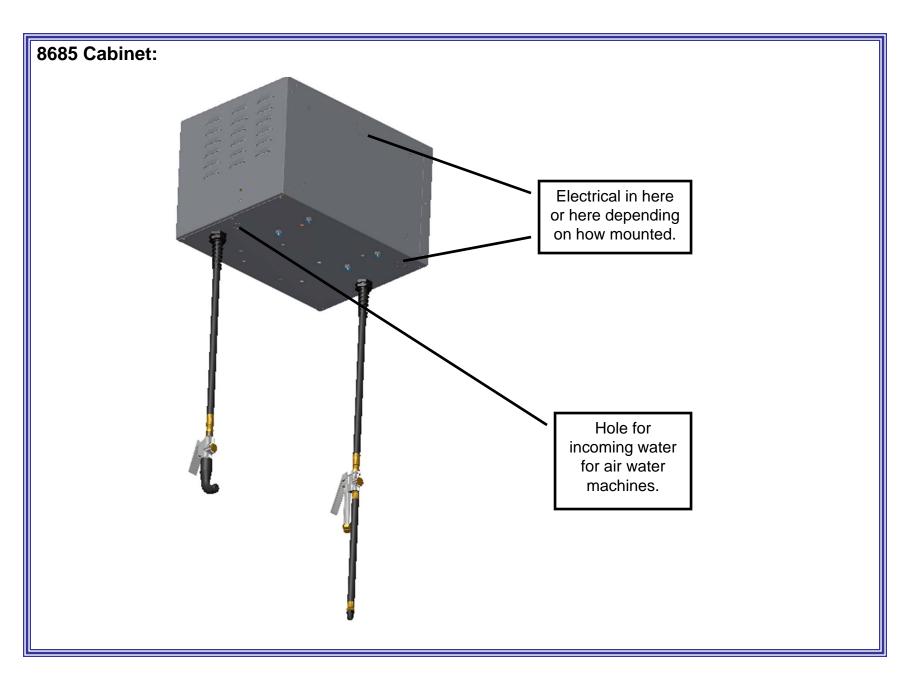


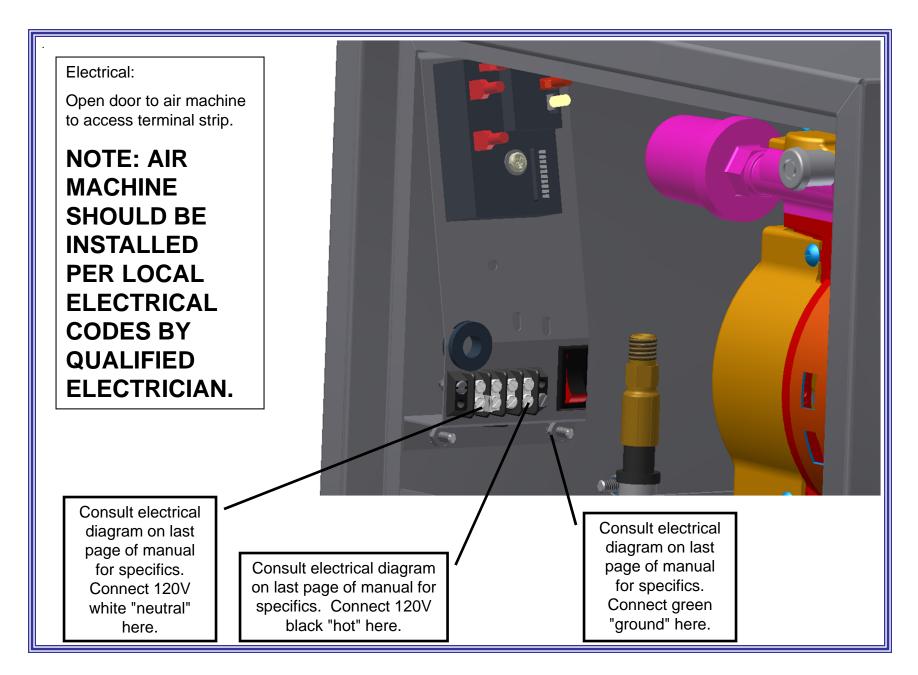

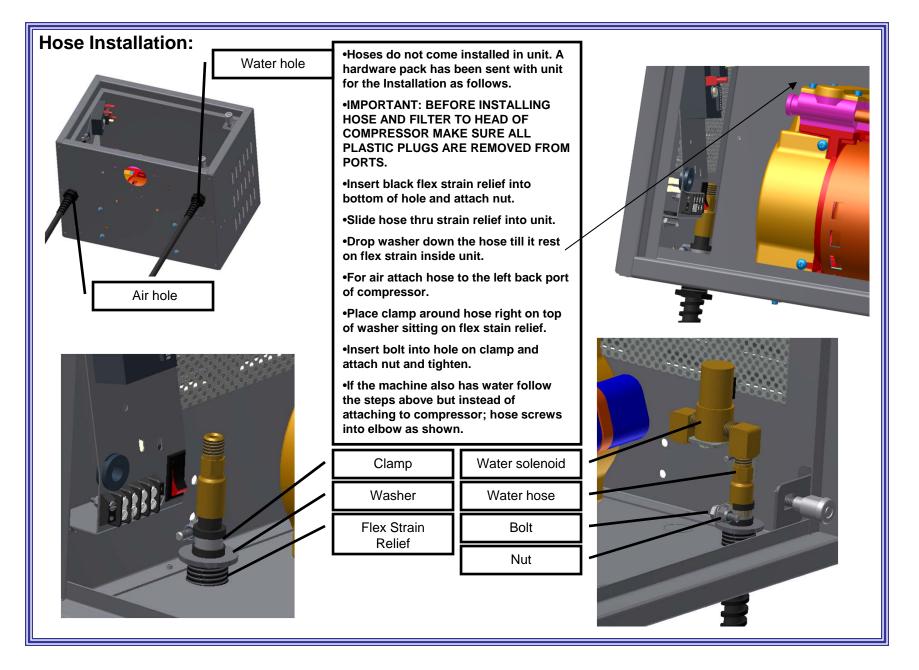

#### **Programming:**

The below timer pictured is the standard SSAC model that allows the end user to select the "coins to start" and the "total time" by settings series of dip switches. The number of "coins to start" dip switch is how many quarters are needed to make the machine come on. In the below example, the "one coin" dip is selected which makes the unit come on with one coin. The "total time" will then need to be set, but a good rule of thumb would be 4 minutes which requires dip switches 3.2 and .8 to be set to on. This scenario means 1 quarter will provide 4 minutes of vacuum time. The total time can always be changed by adding or subtracting time. If the operator would later decide to increase the cost of the unit to "2" quarters, the 2 dip switch would need to be in the on position (all other off) and the time dip switches would still be 3.2 and .8 dips selected for 4 minutes. Timer is non accumulating so coin to start is just to start and time is total time regardless of coin to start.

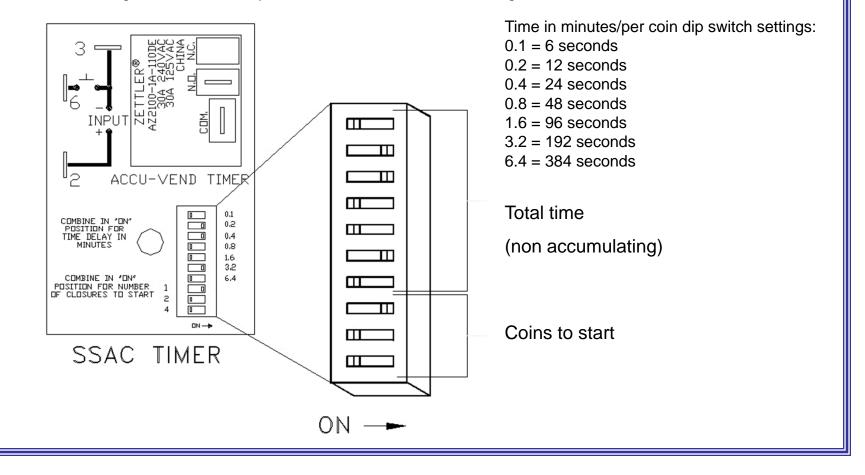

#### **Machine Operating Instructions:**

- 1) Read safety instructions on previous pages.
- 2) Insert coins (or bills) to start.
- 4) Compressor will start.
- 5) Apply chuck to tire valve stem and fill to desired pressure. NOTE: For best results, remove valve stem covers on all tires before depositing money.

6) Hang hose up when finished.

#### Maintenance:

- All servicing of machine should be conducted by an authorized service representative!
- Periodically inspect hose, chuck, and chuck washer for wear or fatigue.
- Every month remove filter from compressor and clean.
- Periodically inspect electrical wires and connections for wear or fatigue.
- Clean canister with a stainless steel cleaner as needed.
- Decals can be cleaned with mild soap and water.
- Replacement parts can be ordered through JE Adams or your nearest dealer.

#### WHEN PERFORMING MAINTENANCE OR TROUBLE-SHOOTING, TURN POWER OFF! QUALIFIED PERSONNEL ONLY!








### TROUBLESHOOTING:


ALWAYS DISCONNECT POWER BEFORE TROUBLESHOOTING!!				
Problem	Possible cause	Solution		
Unit is not powered.	Breaker inside fuse panel is not in the on position.	Turn breaker on.		
	No power to machine.	Check incoming power line voltage.		
	Machine power switch is not on.	Remove dome and flip switch.		
	Loose connection.	Check incoming power connection.		


Unit runs but will not	Air is leaking from unit somewhere.	Turn power off to unit, apply chuck to air source with at least 30lbs of pressure and listen carefully for leaks inside cabinet or air hose. Replace faulty component if leaking.
	If no system leaks, is compressor putting out enough pressure?	If compressor cannot force air into tire, the compressor may have exceeded its life span and need rebuilt (about 1000 hours).
	Chuck washer is worn out?	Replace rubber washer inside chuck with JE Adams PN 8533-3CW.
	Temperature is below freezing and condensation off compressor has froze in air hose.	Remove air hose and chuck and bring into warm area to thaw. Optional air dry systems are available through JE Adams if frequent problem- please call.
Unit keeps tripping breaker from incoming power source	Wrong size breaker or other components running on same circuit.	Install correct breaker for compressor and make sure line is a dedicated power source.
	Compressor or timer might be shorted out?	Isolate problem component and replace if necessary.
		Check key components to isolate failure:
Unit will not start		<b>Timer:</b> Verify proper input voltage. Activate timer. If no output voltage is present when timer should be active, replace timer.
	Possible component failure	<b>Coin mech:</b> If using a mechanical coin mech, remove the wires leading to the timer from the coin mech and tap the together one time for each coin necessary to start the timer. If machine starts, replace the coin mech.
Unit will not dispense water (water	Is source water turned on and not frozen?	Turn on water to system and make sure temperature is above 32 deg.
machines only).	Is water solenoid getting power from timer?	If getting power from timer, replace solenoid.

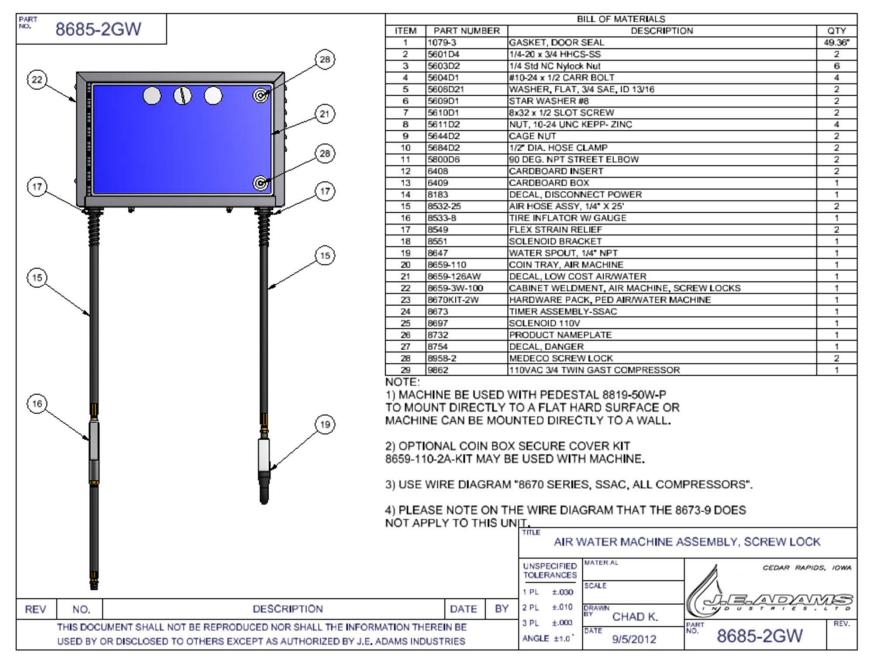


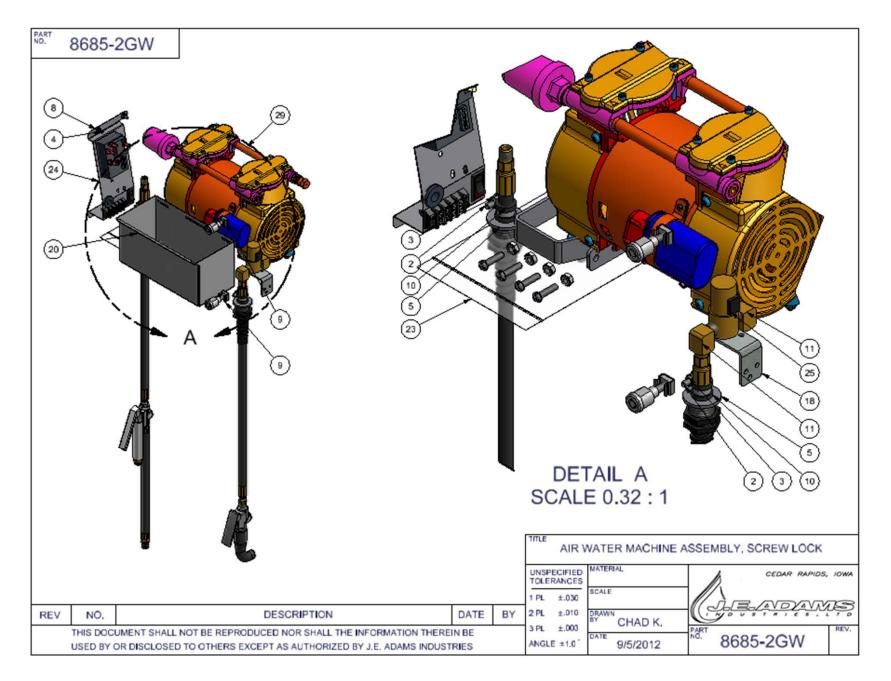

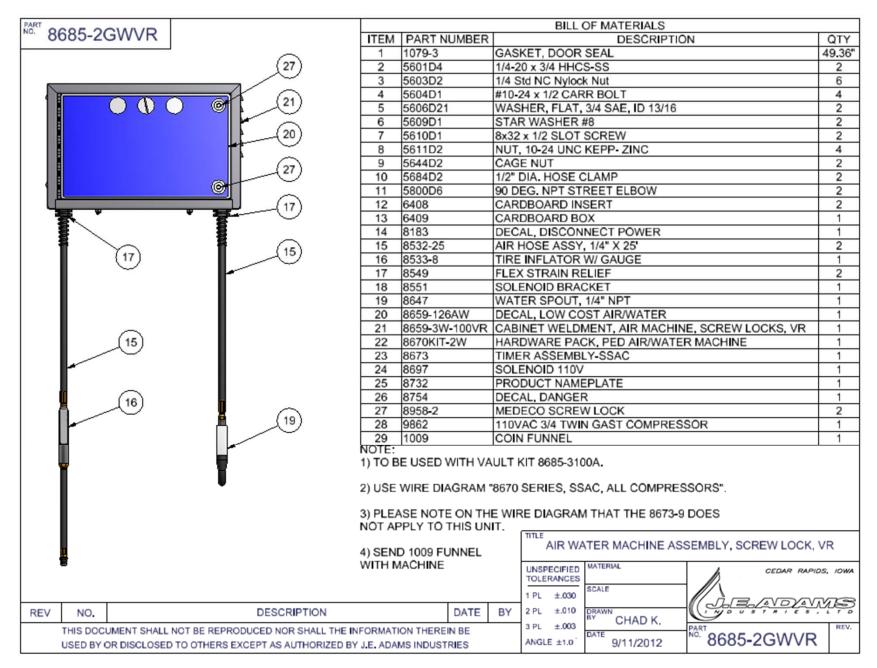

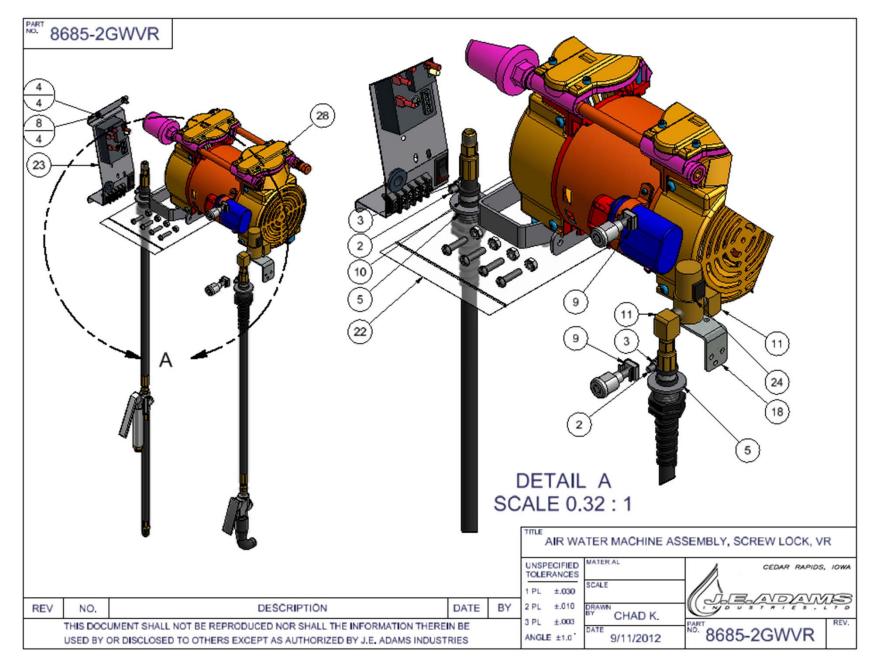

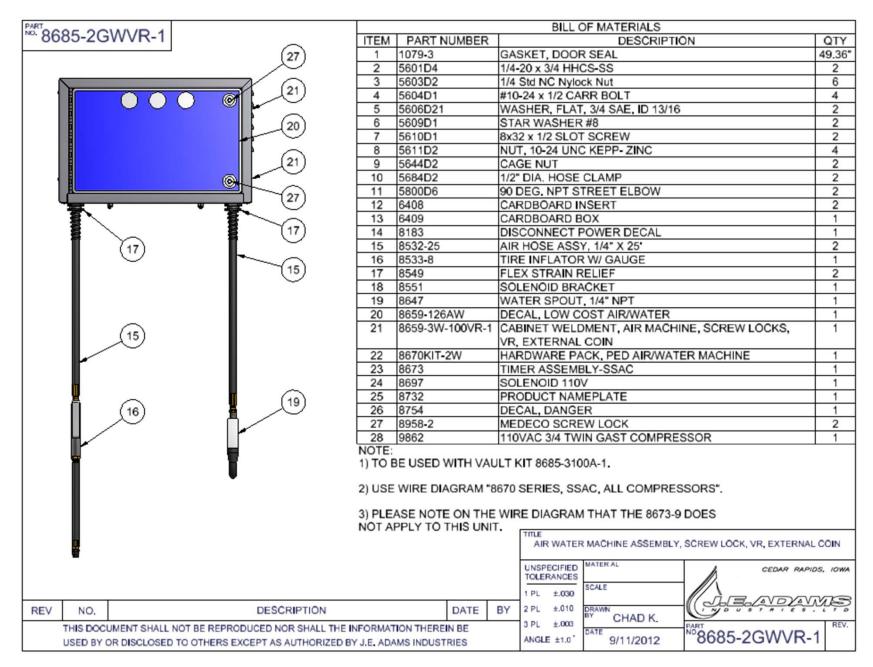

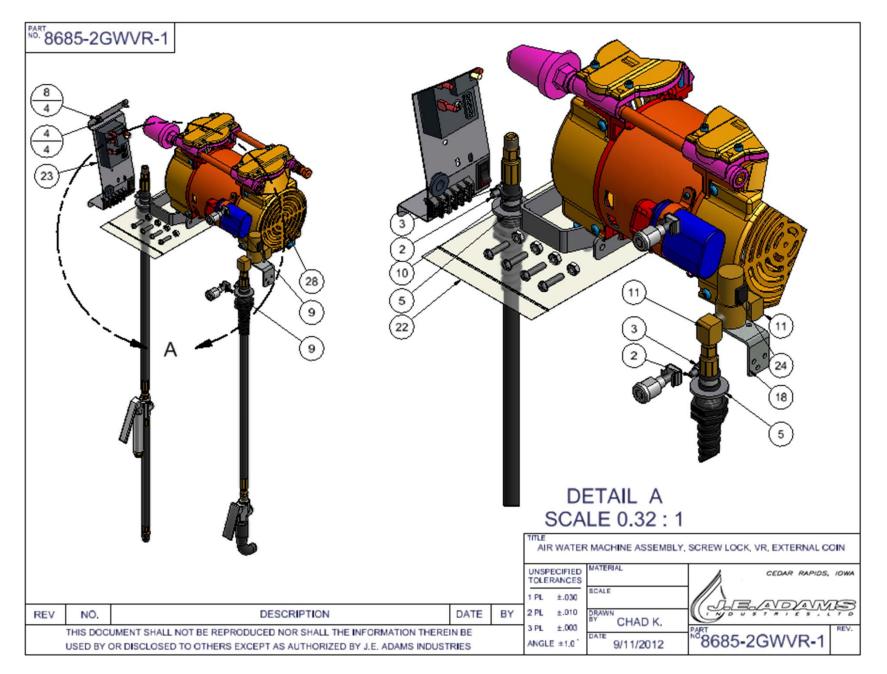

#### 8685-2FG

#### NOTE:


PART NO.

1) MACHINE BE USED WITH PEDESTAL 8819-50 TO MOUNT DIRECTLY TO A FLAT HARD SURFACE OR MACHINE CAN BE MOUNTED DIRECTLY TO A WALL.

2) USE WIRE DIAGRAM "8670 SERIES, SSAC, ALL COMPRESSORS".

3) PLEASE NOTE ON THE WIRE DIAGRAM THAT THE 8673-9 DOES NOT APPLY TO THIS UNIT.

4) AIR HOSE AND CHUCK NOT TO BE INSTALLED IN UNIT. SEND ALONG WITH UNIT AND TO BE INSTALLED BY CUSTOMER. HARWARE KIT 8685KIT-A TO BE SENT ALONG TO AID IN HOSE INSTALLATION.

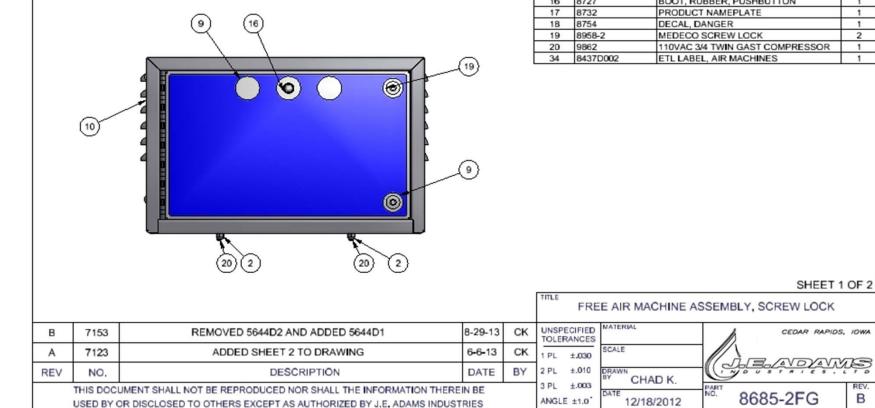

#### BILL OF MATERIALS DESCRIPTION PART NUMBER ITEM QTY 1079-3 GASKET, DOOR SEAL 49.36 5603D2 1/4 Std NC Nylock Nut 2 4 #10-24 x 1/2 CARR BOLT 3 5604D1 4 4 5611D2 NUT, 10-24 UNC KEPP- ZINC 4 5 5644D1 CAGE NUT, 5/16-18 2 6 6408 CARDBOARD INSERT 2 CARDBOARD BOX 7 6409 1 8 8183 DECAL, DISCONNECT POWER 1 8659-126-KIT DECAL, LOW COST AIR 9 1 8659-3W-100-F CABINET WELDMENT, AIR MACHINE, 10 1 SCREW LOCKS, FREE 8659-999 DECAL, MAX TIME 11 1 8670KIT-2 HARDWARE PACK, PED AIR MACHINE 12 1 13 8673 TIMER ASSEMBLY-SSAC 1 KIT, AIR HOSE INSTALLATION 14 8685KIT-A 1 15 8726 PUSH BUTTON 1 BOOT, RUBBER, PUSHBUTTON 16 8727 1 1 1 2 110VAC 3/4 TWIN GAST COMPRESSOR 1 1

REV.

В

