



Supply Cabinet




Coin Box




Power Box

Inside Coin Box

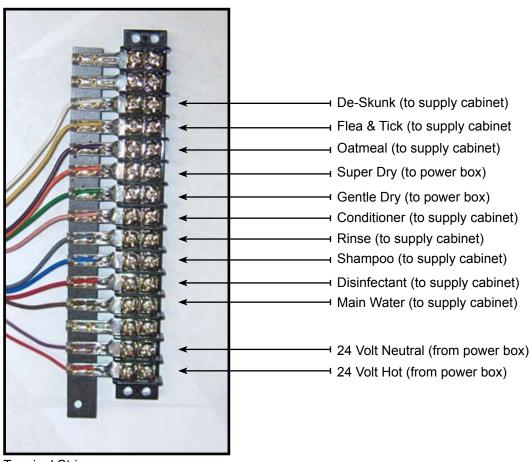

Terminal Strip

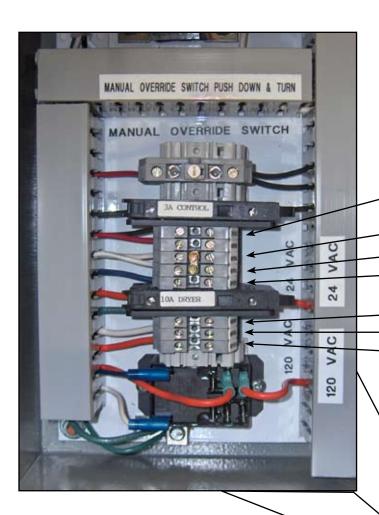

Inside Power Box

24 Volt Hot (to coinbox)

24 Volt Neutral (to coinbox)

4 24 Volt Neutral (to relay)

☐ Gentle Dry (from coinbox)

Ground (from dryer)

→ Neutral (from dryer)

→ 110 Volt Hot (from dryer)

Two Wires Come From the Dryer Wire With Plug:

1. Cut plug off cord on dryer

2. Three Wires on Inside

A. Ground (green)

B. Neutral (white)

C. 110 Volt Hot (black)

Wire With Out Plug:

A. 110 Volt Switched (white)

B. 110 Volt Hot (black)


C. Groud (green)

110 Volt Hot (from 2nd dryer wire)

110 Volt Switched Hot (from 2nd dryer wire)

Super Dry (from coin box)

24 Volt Neutral + (from power box)

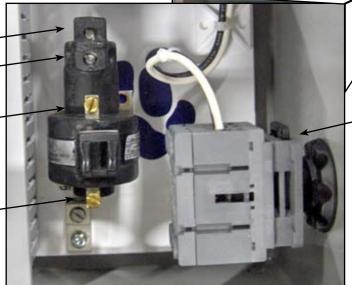

Mercury Relay

Main Disconnect
Switch

Change 10 Amp Fuse to 20 Amp Fuse

Inside Supply Cabinet

