



1-866-825-8659

# Bollard Cover Sizing Tool

Place paper horizontally over pipe from **\*\*OD to OD** to get a correct measurement.

\*Bollard cover sizes are Ideal Shield Specific  
\*\*OD = Outside Diameter

This is the outside of your pipe

This is the inside of your pipe

Measure OD\*\* to OD\*\*  
This pipe will need a 3" bollard cover

3.5" OD = 3" Bollard Cover\*

4" OD = 3.5" Bollard Cover\*

4.5" OD = 4" Bollard Cover\*

5.563" OD = 5" Bollard Cover\*

6.625" OD = 6" Bollard Cover\*

7.5" OD = 7" Bollard Cover\*

8.625" OD = 8" Bollard Cover\*

Anything beyond 8" will need a 10" Bollard Cover\*

