


Instructions for 7303 Air Hog™



Please read before use.



Register your product
at [http://www.mytee.com/
support/register](http://www.mytee.com/support/register)

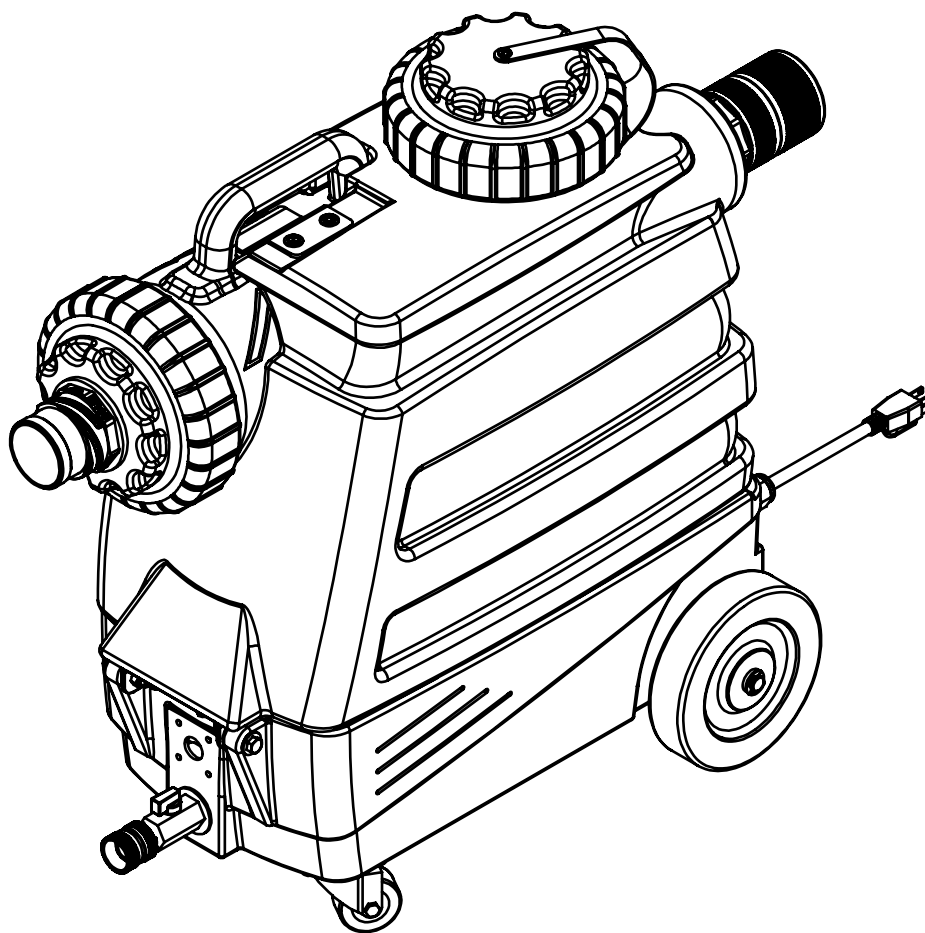

[General Information p. 2](#)

[Features p. 4](#)

[Operation p. 5](#)

[Configurations p. 8](#)

[Parts & Pricing p. 11](#)

[Wiring Diagram p. 13](#)

[Notes p. 14](#)

Model # _____

Serial # _____

Form # ADP-7303

08-16

GENERAL INFORMATION

Dear Customer:

Congratulations on the purchase of your new 7303 Air Hog™. As you are already aware, the scene of the equipment world is becoming more high tech, and we at Mytee Products Inc. strive to keep you on the cutting edge with superior quality and technology.

Keep in mind that the Air Hog™ is a machine, so neglect or abuse will cause unnecessary damage and void the warranty. However with simple maintenance the 7303 Air Hog™ will give quality performance for many years to come.

If warranty questions arise, please consult user manual or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee Products Inc. Service Center. To see an updated list, visit our website at www.mytee.com

Before you begin using, please read your manual thoroughly.

Sincerely,
Mytee Customer Care Dept.

Grounding Instructions

This machine must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.



DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This appliance is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Figure 1 below. A temporary adapter illustrated in Figures 2 and 3 may be used to connect this plug to a 2-pole receptacle as shown in Figure 2 if a properly grounded outlet (Figure 1) is not available. The temporary adapter should be used only until a properly grounded outlet (Figure 1) can be installed by a qualified electrician. The green colored rigid ear, tab or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. Grounding adapters are not approved for use in Canada.

Replace the plug if the grounding pin is damaged or broken.

The Green (or GreenYellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.

DO NOT use extension cords.

Please Note for America use only

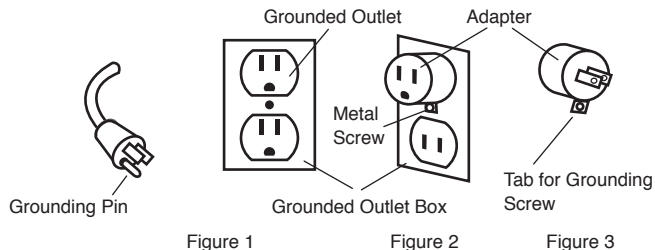

Parts and Service

Repairs, when required, should be performed by Mytee service personnel or Mytee authorized Service Center using Mytee original replacement parts and accessories. Call Mytee for repair parts or service. Please specify the Model and Serial Number when discussing your machine.

Name Plate

The Model and Serial Number of your machine are shown on the name plate located on the inside of the machine. This information is needed when ordering repair parts for the machine. Use the space provided on the front cover to note the Model and Serial Number of your machine for future reference.

Unpacking the Machine

When the machine is delivered, carefully inspect the shipping carton and the machine for damage. If damage is evident, save the shipping carton so that it can be inspected by the carrier that delivered it. Contact the carrier immediately to file a freight damage claim.

Caution and Warnings

Symbols

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.



DANGER

Is used to warn of immediate hazards that will cause severe personal injury or death.



WARNING

Is used to call attention to a situation that could cause severe personal injury.



CAUTION

Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.



WARNING

To reduce the risk of fire, electrical shock, or injury:

1. Read all instructions before using equipment.
2. Use only as described in this manual. Use only manufacturer's recommended attachments.
3. Always unplug power cord from electrical outlet before attempting any adjustments or repairs.
4. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
5. Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
6. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not use with damaged cord or plug. If cord is damaged, repair immediately.
8. Do not use outdoors or on wet surfaces and or standing water.
9. Always unplug or disconnect the appliance from power supply when not in use.
10. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
11. Do not use in areas where flammable or combustible material may be present.
12. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
14. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
15. Use extra care when using on stairs.
16. To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.
17. The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
18. When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.
19. Do not leave operating unattended.



CAUTION

DO NOT use with a truckmount. Serious damage will occur to the Air Hog's™ vacuum motor.

Pre-Operation

1. Remove furniture and other items from the area you are going to clean.
2. Vacuum area and remove debris.
3. Protect cabinets, walls and painted surfaces with drop cloths or plastic.
4. Inspect power cord for damage.

Operating Instructions

1. Plug into an 8-amp, grounded circuit.
2. When using the vacuum, turn on the vacuum switch.
3. When using the pump, turn on the pump switch.
4. When using a wand or other vacuum attachment, or using the Air Hog™ as a

GENERAL INFORMATION

- standalone extractor, connect the vacuum hose to the front vacuum port in the on-board Lint Hog™ filter. A Mytee Cuff-Lynx™ coupler or reducer will be needed.
5. Connect the vacuum attachment's solution hose to the front female QD.
 6. When using the auto pump-out, attach a garden hose to the front hose inlet.
 7. If auto pump-out is not used, let tank fill until ball float stack stops tank from filling. Empty tank.
 8. When using with other machines, connect vacuum hose to one of two back vacuum ports.

After Use

1. Unplug.
2. Empty solution tank, if needed, rinse with clean water and dry.
3. Clean internal filter. Unscrew lid on top of tank and remove. Reach into tank and twist off using a counter-clockwise motion. Rinse and dry, replace and close lid.
4. Clean external Lint Hog™ filter on top of tank. Twist off housing lid. Remove stainless steel strainer basket. Rinse to clean, dry and replace. Note: Do not strike unit against hard surface to remove debris. Damage may result.
5. Store in a clean, dry place.

Maintenance Schedule

Maintenance item	Daily	Once a week
Clean and inspect tank.	x	
Check power cord.	x	
Clean with all-purpose cleaner and cloth.	x	
Flush with Mytee® System Maintainer to dissolve normal chemical build-up.		x
Clean with compressed air.		x
Remove float shut-off unit from inside of tank to clean (simply pull off).		x
Inspect for water leaks and loose hardware.		x

Troubleshooting

There is no power.

1. Make sure the machine is plugged into the proper outlet.
2. Check the circuit breaker and reset. Other items should not run on the same circuit as the machine. The outlet circuit must be a minimum of 8-amps.
3. Check switch. If it is damaged, replace with OEM part.
4. Replace or repair loose wires.
5. Replace motor if damaged.

Pump-out does not work properly.

1. If filters are clogged, remove and rinse with clean water.
2. Check pump-out wiring. It may need to be reconnected.
3. Check pump-out switch, it may need to be replaced with OEM part.

Vacuum motor does not work properly.

1. Check to see that all vacuum hoses are tightly connected.
2. Check vacuum port cap in back to make sure it is tightened.
3. Insure vacuum lid is tightened.
4. Make sure ball float is firmly installed on the elbow.
5. If ball float is shut off, empty tank of all water.

Water is leaking.

1. If water is coming out of the recovery tank, use a low foaming detergent.
2. Check to make sure debris has not been sucked through ball float stack into the motor. Pre-vacuuming prevents this situation.
3. If a vacuum hose is leaking, make sure Cuff-Lynx™ and Lint Hog™ are securely tightened.
4. Check hose fittings.
5. Insure all brass fittings are tightened.

Machine Specifications

Recovery Tank	4 gallons
Vacuum	Single 3-stage high performance
CFM	115
Water Lift	145"
Pump-Out GPM	3.3
Power Consumption	14 amps @ 115V 60Hz
Machine Weight	46 lbs.
Machine Dimensions	29.5" x 12.5" x 24.5"
Power Cord	25' 16/3

230V Configuration Information

Model Number	7303-230
Power Consumption	7 amps @ 230V 60Hz/50Hz

FAQs

Q – What comes standard with the Air Hog™?

A – Internal stainless steel strainer basket, pack of 25 Piglet™ filters, and the following additional Cuff-Lynx™ hose connections:

- Part No. H136 – 2" male swivel coupler, connects to 2" female vacuum hose.
- Part No. H141 – 2" female reducer, connects to 1 ½" female vacuum hose.
- Part No. H110 – 2" female swivel coupler, connects to 2" female vacuum hose.

Q – Where do I plug in the machine?


A – A 20 amp grounded circuit is required.

Q – What machines are recommended for use with the Air Hog™?

A – The Air Hog™ can be used to boost the CFM of any extractor with a dual 2-stage, or single 3-stage or higher vacuum motor, including Mytee's® HP extractors, Contractor's Special™, Speedster®, and Speedster® LTD models.


7303 AIR HOG™ FEATURES

FRONT

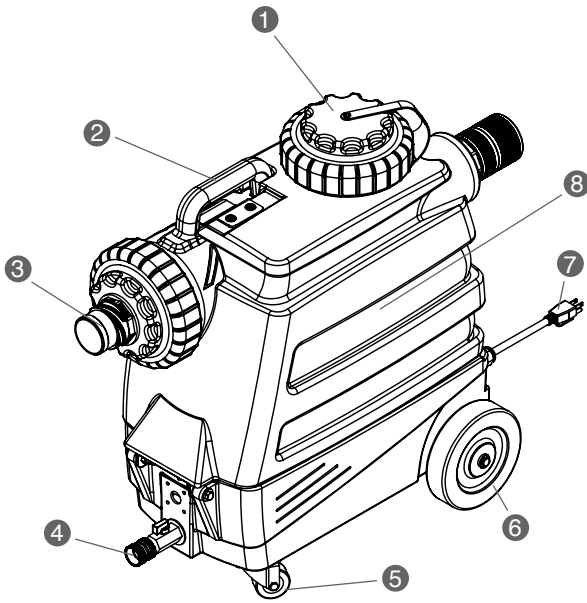


- 1. 6" Cap with tether
- 2. Handle
- 3. 2" Male Cuff-Lynx™ starter
- 4. Pump-Out fitting
- 5. 2" Casters
- 6. 6" Wheels
- 7. 25' Power cord
- 8. Vac tank

BACK

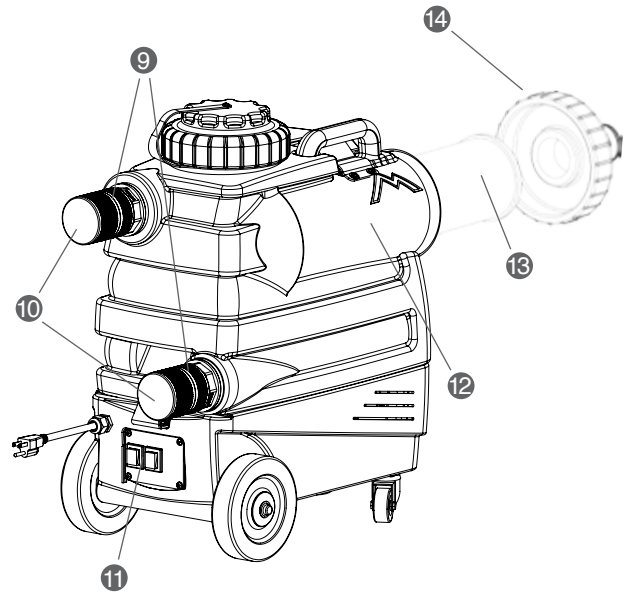


- 9. 2" Female Cuff-Lynx™ starter
- 10. 2" Male Cuff-Lynx™ plug
- 11. Switches
- 12. Filter housing
- 13. Filter
- 14. Filter cap


INCLUDED ACCESSORIES

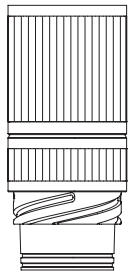


H136 - Coupler Swivel,
2" male x 2" female vac hose

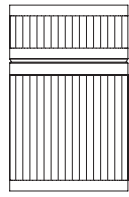

H110 - Coupler Swivel,
2" female x 2" female vac hose

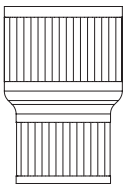


H141 - Reducer,
2" female x 1.5" female vac hose


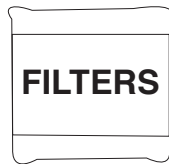


G008 - Pack of Piglet™
filters

REPLACING HOSE CUFFS WITH CUFF-LYNX™

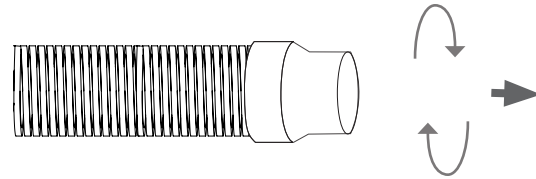

Twist clock-wise to remove standard cuffs.

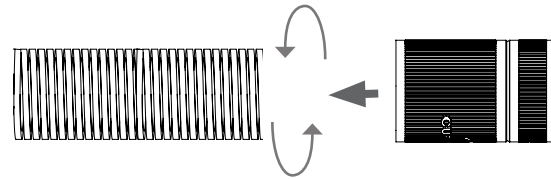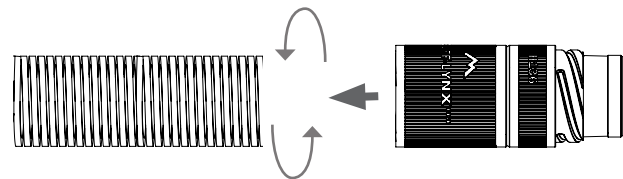


Twist counter clock-wise to attach Cuff-Lynx™ to vac. hose.


Once you receive your Air Hog™, you will need to replace the cuffs on your vacuum hose. To remove old cuffs, twist clock-wise. To attach either male, female or reducer Cuff-Lynx™ to vacuum hose, twist counter clock-wise.

7303 AIR HOG™ OPERATION

PIGLET FILTER & STRAINER BASKET

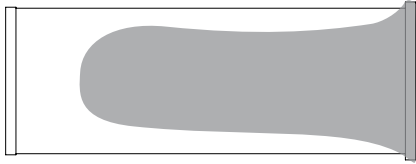


Insert one of the Piglet™ filters over the strainer basket opening for added protection. Once Piglet™ is added, insert strainer basket within the Lint Hog™.

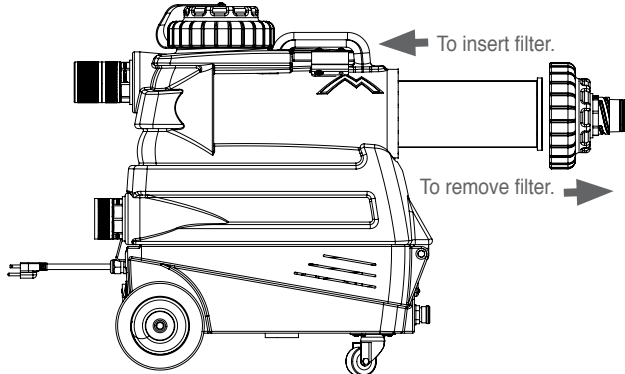


When the Lint Hog™ strainer basket fills up or you notice a change in performance, empty the unit, clean the strainer basket and replace Piglet™. Insert strainer basket back in the Lint Hog™.

POWER CORD

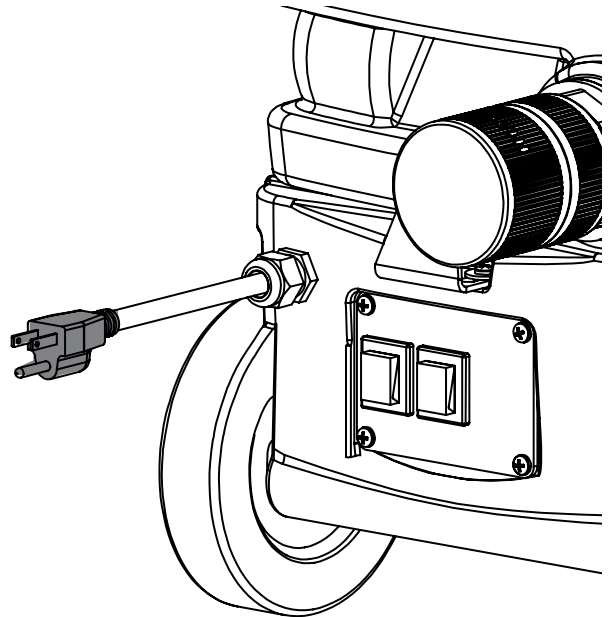


Plug the power cord into a 20A grounded wall outlet.

SWITCHES

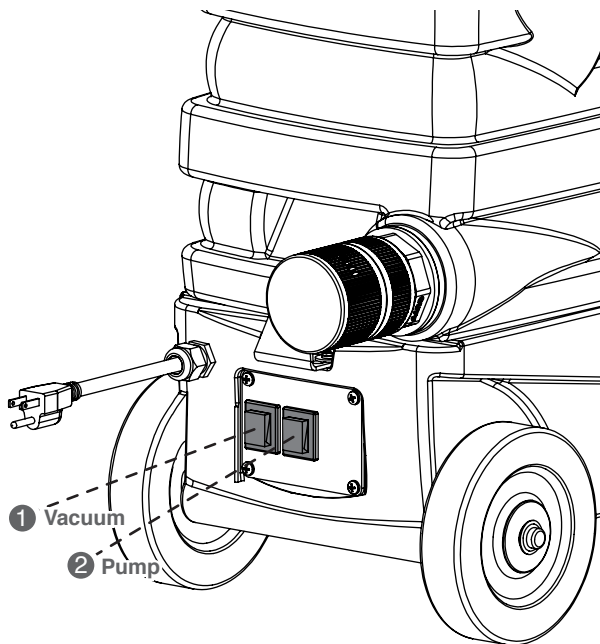

Located in the rear of the machine are the vacuum switch (1) and the pump-out switch (2) **Use the vacuum switch at all times while using the machine. Turn on the pump switch when using the auto pump-out feature.**


VACUUM HOSE CONNECTIONS

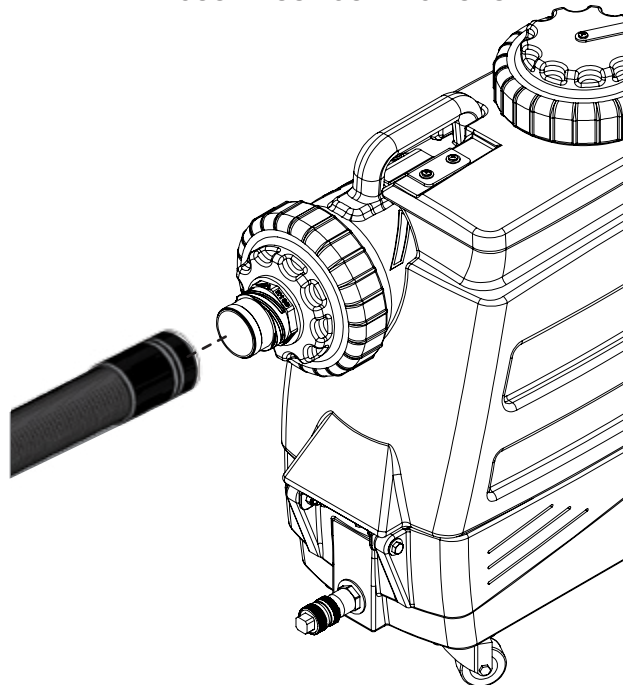

A vacuum hose attaches to the Lint Hog™ vacuum port in the front of the machine, using its male Cuff-Lynx™ connection. Note* - You will need a Cuff-Lynx™ coupler or reducer to attach the vacuum hose to the Air Hog.™


7303 AIR HOG™ OPERATION

NO SOLUTION HOSE CONNECTION

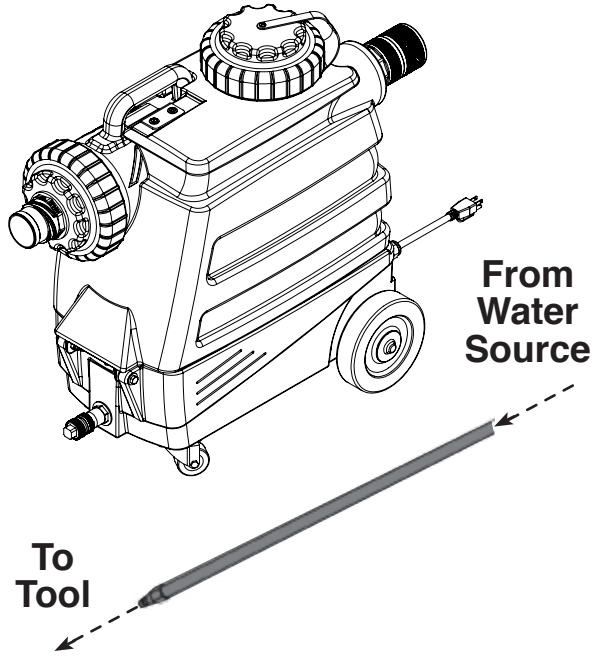

No actual solution hose connects to the Air Hog™. Connect your solution hose to a faucet or other water source. You may need additional hose adaptors which are not included.

VACUUM PLUGS

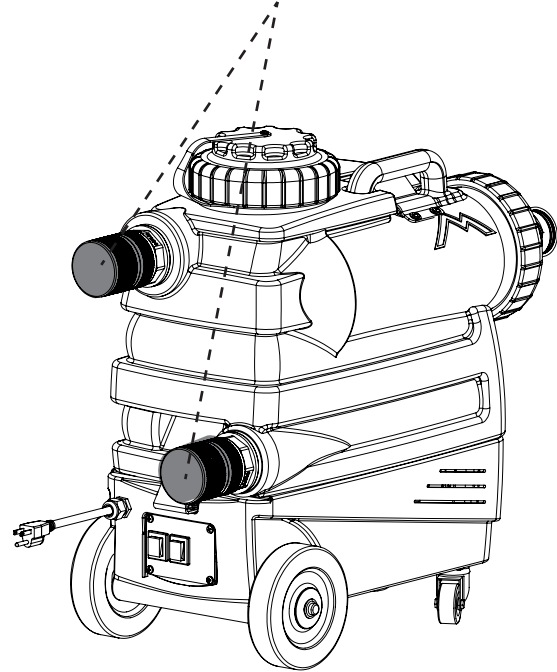


Two vacuum plugs are located in the back.

REAR PLUGS

Cap top plug to use as a flow through booster. Waste water will flow through to main extractor.


Cap both plugs to be used as a stand alone extractor with or without pump-out.

Cap bottom plug to use as booster with pump-out.

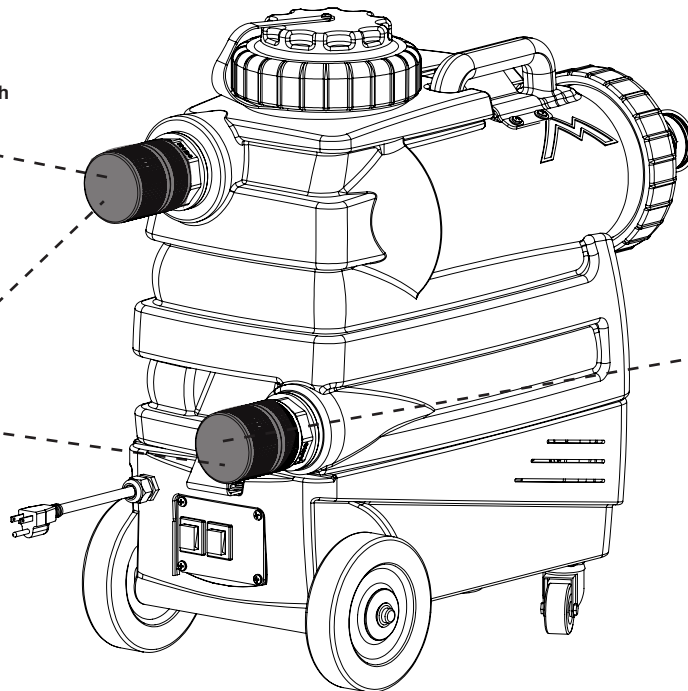


7303 AIR HOG™ OPERATION

REMOVAL AND CLEANING OF LINT HOG™ FILTER

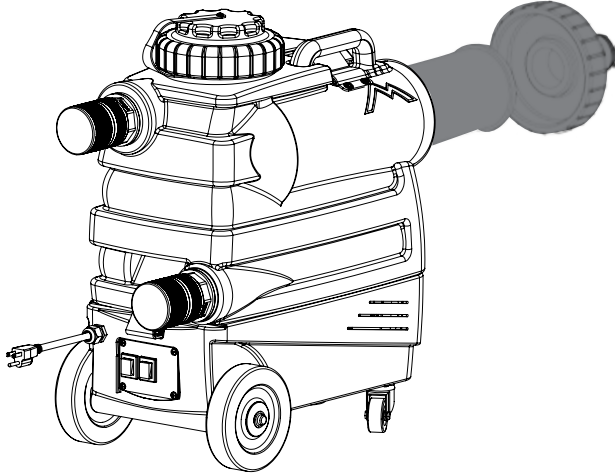


To clean the exterior Lint Hog™, twist off the cap and remove the stainless steel strainer basket. To clean, rinse with water. Do not strike unit against hard surface to remove debris. Damage may result.

TOP CAP

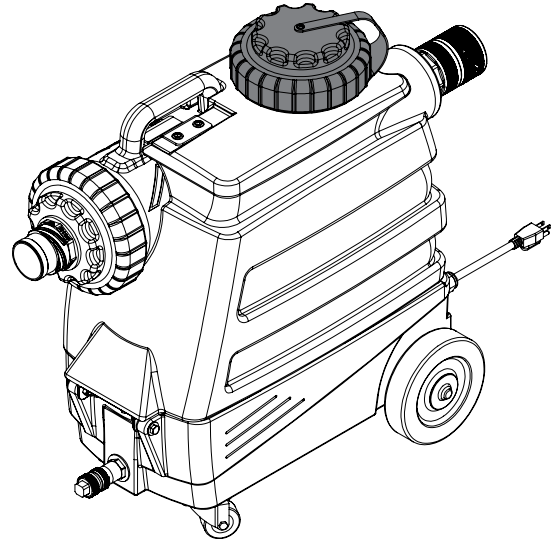


The top cap twists off for access to vacuum tank, internal pump-out filter and ball float stack.

OPTIONAL AUTO PUMP-OUT

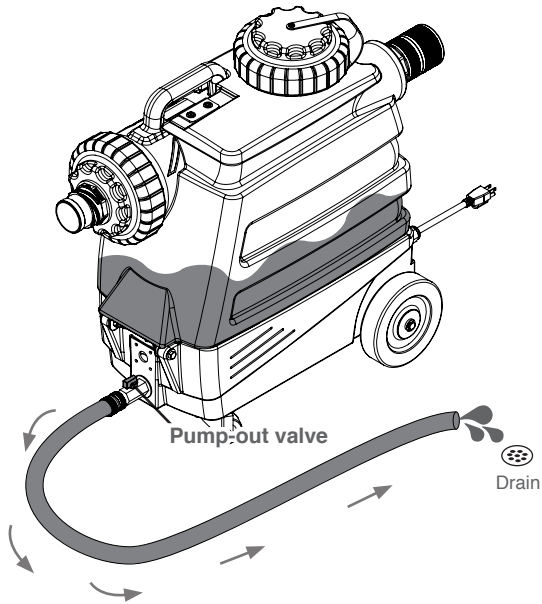

Attach a garden hose to the front hose inlet to pump dirty water from the tank. When you are ready to work, turn on the pump switch located on the lower back of the machine and turn the ball valve located on the pump-out fitting to the "on" position. When the auto pump-out is not in use, make sure the valve on the pump-out fitting is in the "off" position to prevent leaks.

EMPTYING THE TANK


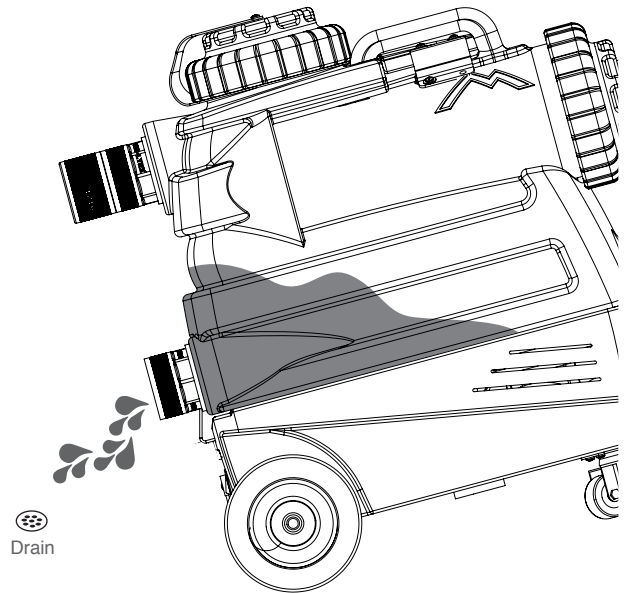


To empty the tank. Unscrew bottom rear plug and tilt Air Hog™ or use the auto pump-out. (See previous frame.)


USING THE AIR HOG™ AS A STAND-ALONE EXTRACTOR

Can be used with:


- Mytee® T-REX™ Rotary Extractors
- Carpet cleaning wands
- Upholstery tools

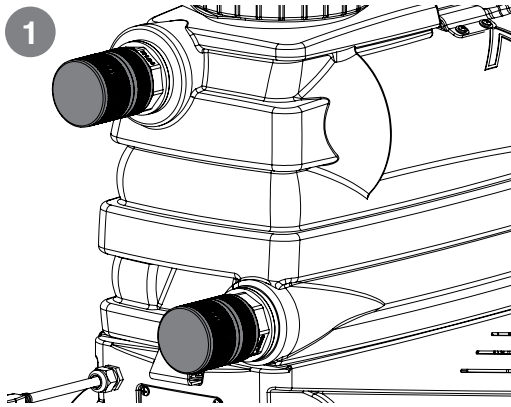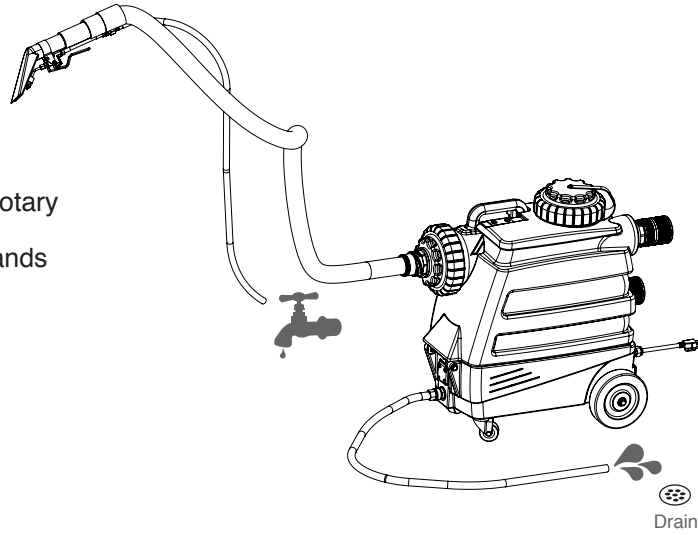


1 Cap both rear vacuum ports with Cuff-Lynx™ plugs.

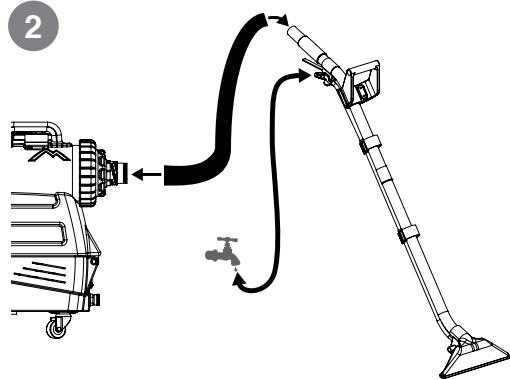

2 Connect vacuum hose from your cleaning tool to the Air Hog's™ front vacuum port. Connect solution hose from cleaning tool to external water source. It may be necessary to purchase an adaptor for the water source you use.

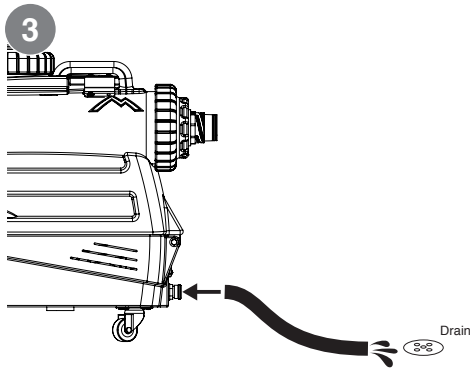


3 To use auto pump-out: Connect standard garden hose to the pump-out connection on the front of the Air Hog™ and place the other end of the hose in a drainable location (toilet, sink, etc.).

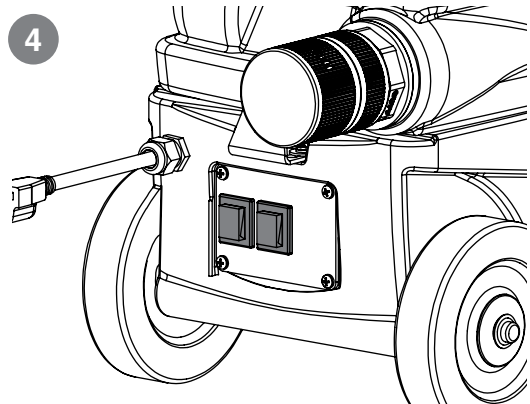


4 Turn on the external water source. Switch on the vacuum to begin extracting. If using the pump-out feature, switch on the pump-out. If you are not using the pump-out, you will need to empty the recovery tank once the float switch cuts off the vacuum.

USING A SINGLE AIR HOG™ AS A BOOSTER

The Air Hog™ can be used either as a booster with auto pump-out or as a booster and pass-through extractor.

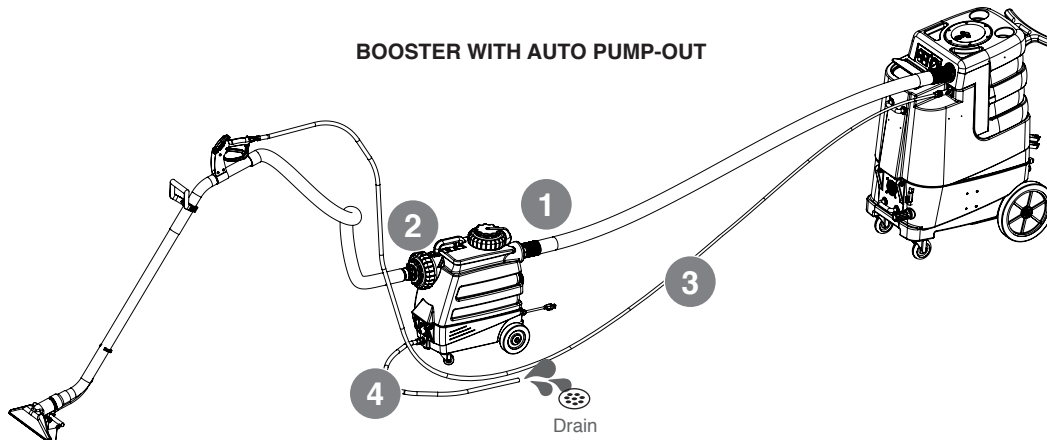

1. Connect a vacuum hose from your portable extractor to the top vacuum port on the rear of the Air Hog™. **IMPORTANT: Plug the lower vacuum port on the rear of the Air Hog™ with one of the included Cuff-Lynx™ plugs.** **2.** Connect vacuum hose from the front vacuum port on the Air Hog™ to your cleaning tool. **3.** Connect a solution hose from your portable extractor directly to your cleaning tool, bypassing the Air Hog™. **4.** Connect a standard garden hose to the pump-out fitting on the front of the Air Hog™. Place the other end of the hose in a drainable location (toilet, sink, etc.). Turn on your portable extractor and switch on the Air Hog's™ vacuum and pump-out and begin cleaning.

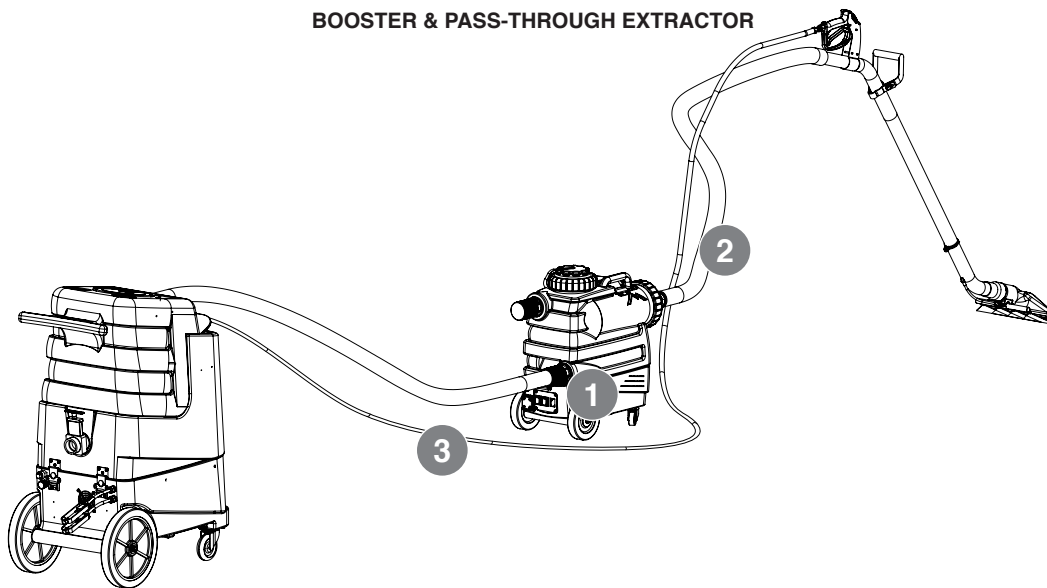


1. Connect a vacuum hose from your portable extractor to the lower vacuum port on the rear of the Air Hog™. **IMPORTANT: Plug the top vacuum port on the rear of the Air Hog™ with one of the included Cuff-Lynx™ plugs.** **2.** Connect vacuum hose from the front vacuum port on the Air Hog™ to your cleaning tool. **3.** Connect a solution hose from your portable extractor directly to your cleaning tool, bypassing the Air Hog™. Turn on your portable extractor and switch on the Air Hog's™ vacuum and begin cleaning. Extracted water will pass through the Air Hog™ and be deposited in your portable extractor's recovery tank.

USING MULTIPLE AIR HOGS™ AS BOOSTERS IN A “DAISY CHAIN”


You can chain together multiple Air Hogs™ in order to maximize and maintain high suction on very long hose runs. This is called a “daisy chain” setup. You can set up the Air Hogs™ to allow extracted water to pass through into your portable extractor or you can use the pump-out on one of the Air Hogs™.

“DAISY CHAIN” WITH PUMP-OUT

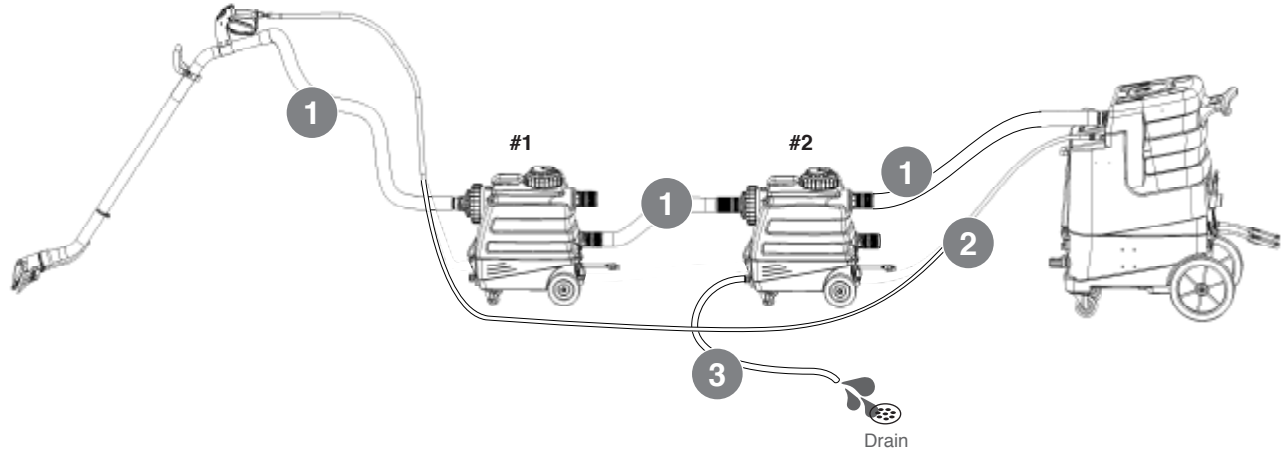

1. Connect vacuum hoses. One from your cleaning tool to the vacuum port on the front of the Air Hog™, one from the lower vacuum port on the rear of Air Hog™ #1 to the front vacuum port of Air Hog™ #2, and one from the upper vacuum port on the rear of Air Hog™ #2 to the vacuum port on your portable extractor. **IMPORTANT: Remember to plug the unused vacuum ports on the rear of each Air Hog™ using the included Cuff-Lynx™ plugs.** **2.** Connect solution hose from your portable extractor directly to your cleaning tool, bypassing all Air Hogs™. You may need to chain together multiple solution hoses. **3.** Connect a standard garden hose to the pump-out fitting on the front of Air Hog™ #2. Place the other end of the hose in a drainable location (toilet, sink, etc.). Turn on your portable extractor and switch on the Air Hogs™ vacuums as well as the pump-out on Air Hog™ #2 and begin cleaning. Extracted water will pass through Air Hog™ #1 into Air Hog™ #2 where it will be pumped out.

“DAISY CHAIN” PASS-THROUGH SETUP

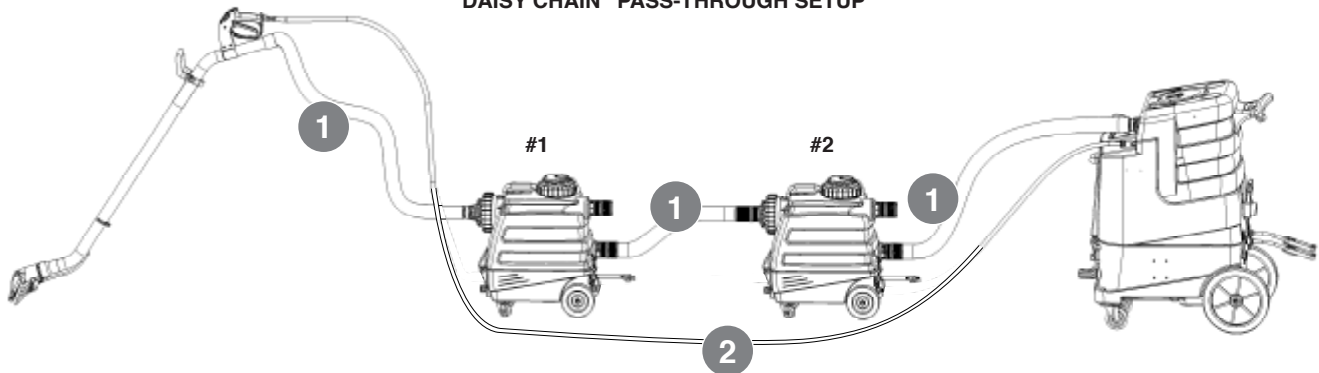

1. Connect vacuum hoses. One from your cleaning tool to the vacuum port on the front of the Air Hog™, one from the lower vacuum port on the rear of Air Hog™ #1 to the front vacuum port of Air Hog™ #2, and one from the lower vacuum port on the rear of Air Hog™ #2 to the vacuum port on your portable extractor. **IMPORTANT: Remember to plug the unused vacuum ports on the rear of each Air Hog™ using the included Cuff-Lynx™ plugs.** **2.** Connect solution hose from your portable extractor directly to your cleaning tool, bypassing all Air Hogs™. Turn on your portable extractor and switch on the Air Hogs™ vacuums and begin cleaning. Extracted water will pass through all Air Hogs™ and be deposited in your portable extractor’s recovery tank.

7303 AIR HOG™ PARTS & PRICING


ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
1	H135	Cuff-Lynx, 2" m cuff x 2" mpt	1	\$3.99 ea
2	F561	cap, 6", threaded, w/ 2" mpt	1	\$23.99 ea
3	G031	gasket, 3.25" i.d. x 5.88" o.d.	2	\$6.99 ea
4	H359	basket, strainer, 4.5 DIA x 12.5"	1	\$36.99 ea
5	G084	gasket, 4.55" x 5.5"	1	\$4.99 ea
6	F563	filter, body, inline, w/ 2" mpt	1	\$34.99 ea
7	G075	gasket, vacuum, m/ll	1	\$7.99 ea
8	H230	screw, 10-32 x 1/2", phil pan head, s/s	19	\$0.99 ea
9	G065	lether, cap, 6 1/2"	1	\$12.99 ea
10	F560	cap, 6", threaded	1	\$23.99 ea
11	H289	Washer # 10 flat, s/s	4	\$0.99 ea
12	H158	bracket, filter, fastening, vac booster	1	\$5.99 ea
13	F684	adaptor, pvc 2, fmsl x fml	1	\$6.99 ea
14	H124	Cuff-Lynx, 2" mpt x 2" female cuff	2	\$3.99 ea
15	G122	o-ring, 2.318" OD x 3/32" width	2	\$2.99 ea
16	H121	cuff-lynx, 2" plug	2	\$3.99 ea
17	P973	vac tank, booster, m/ style	1	\$104.99 ea
18	H333	mesh filter, auto dump, 1/2" mpt	1	\$12.99 ea
19	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	1	\$2.49 ea
20	H299	washer, 1 1/16" i.d. x 1-1/2" o.d. x .075, s/s	4	\$0.99 ea
21	B216	nipple, brass, 3/8" x close	1	\$1.99 ea
22	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fmp/pt	1	\$8.99 ea
23	B160	adaptor, brass, 1/2" barb x 3/8" fsw, ball end	2	\$3.49 ea
24	P755	elbow, U, 180, 1-1/2", float	1	\$8.99 ea
25	H297	screw, 8 x 1/2", hex head, zinc	3	\$0.99 ea
26	H235	float, 1.5", ball style	1	\$19.99 ea
27	PH633-4	pipe, 1-1/2" x 5-1/2", pvc	1	\$4.99/ft
28	P520	adaptor, pvc, 1-1/2" mpt x 1-1/2" fms	1	\$2.99 ea
29	H314	nut, lock, 1-1/2", steel	1	\$1.99 ea
30	G004-A	gasket, vacuum motor	1	\$6.99 ea
31	G004	gasket, vacuum motor	1	\$8.99 ea
32	C302A	vac motor, 3-stage hp, 1.20V, 145"	1	\$148.99 ea
33	H210	washer, 1/4" flat, s/s	13	\$0.99 ea
34	H076	bolt 1/4-20 x 4, s/s	3	\$0.99 ea
35	H503	vac support, 3 stage, 3.25", no ftrds	3	\$3.99 ea
36	H304	screw, 8 x 5/8", phil oval, s/s	4	\$0.99 ea
37	H296	guard, cooling fan, wire	1	\$2.99 ea
38	G059	exhaust boot, plastisol	1	\$4.99 ea
39	H217	clamp, hose, 2-1/4 dia	1	\$1.49 ea
40	H316	bolt, 1/4x1-1/2", hex head zinc	2	\$0.99 ea
41	H216	nut, lock, 1/4-20, nylon insert, s/s	2	\$0.99 ea
42	H379	bracket, front, small	1	\$3.99 ea
43	H213	washer, 1/4" lock, s/s	2	\$0.99 ea
44	H201	bolt, 1/4-20 x 1/2", hex head, zinc	2	\$0.99 ea
45	B204	qd, 3/4" female x female garden hose	1	\$9.99 ea
46	B265B	GD, 1/2" npt x 3/4" mgh, pump-out	1	\$3.99 ea
47	B656A	ball valve, 1/2" m x 1/2" f	1	\$16.49 ea
48	H681	caster, 2", black hub, gray tread	2	\$8.99 ea
49	H273	nut, kep, # 10-32, zinc	14	\$0.99 ea

230 VOLT VERSION

ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
30	C304	vac motor, 3 stage, 230v, tangential	1	\$199.99 ea
69	C381A	pump out, 3.3 GPM, 1/10 HP, 230v	1	\$262.99 ea

ITEMS NOT SHOWN

PART NO.	DESCRIPTION	QTY.	MSRP
G008	piglet filters	1	\$0.99 ea
G076	filter bag, 3.5" metal O-ring, mesh bag	1	\$4.99 ea
H110	cuff-lynx, 2" hose x 2" fem swivel cuff-lynx	1	\$3.99 ea
H141	Cuff-Lynx, 2" to 1.5" reducer	1	\$3.99 ea
H136	Cuff-Lynx, 2" hose x 2" male swivel cuff-lynx	1	\$3.99 ea
ADM-7303	manual, vacuum booster	1	

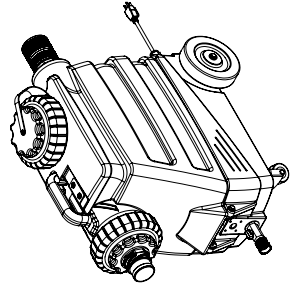

MYTEE PRODUCTS, INC.
 886-921-1101

Vac Booster


REV **E**
 DWG. NO. **7303**
 SCALE: 1:2

DATE: 5/20/11
 DRAWN BY: JLABORERS
 CHECKED: JLABORERS

REVISIONS:
 1. REVISED TO REFLECT THE NEW MOTOR AND COMPONENTS THE DRAWING IS THE PROPERTY OF MYTEE PRODUCTS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.
 MYTEE PRODUCTS, INC. IS AN ISO 9001:2008 CERTIFIED COMPANY.

SHEET 1 OF 3


7303 AIR HOG™ PARTS & PRICING

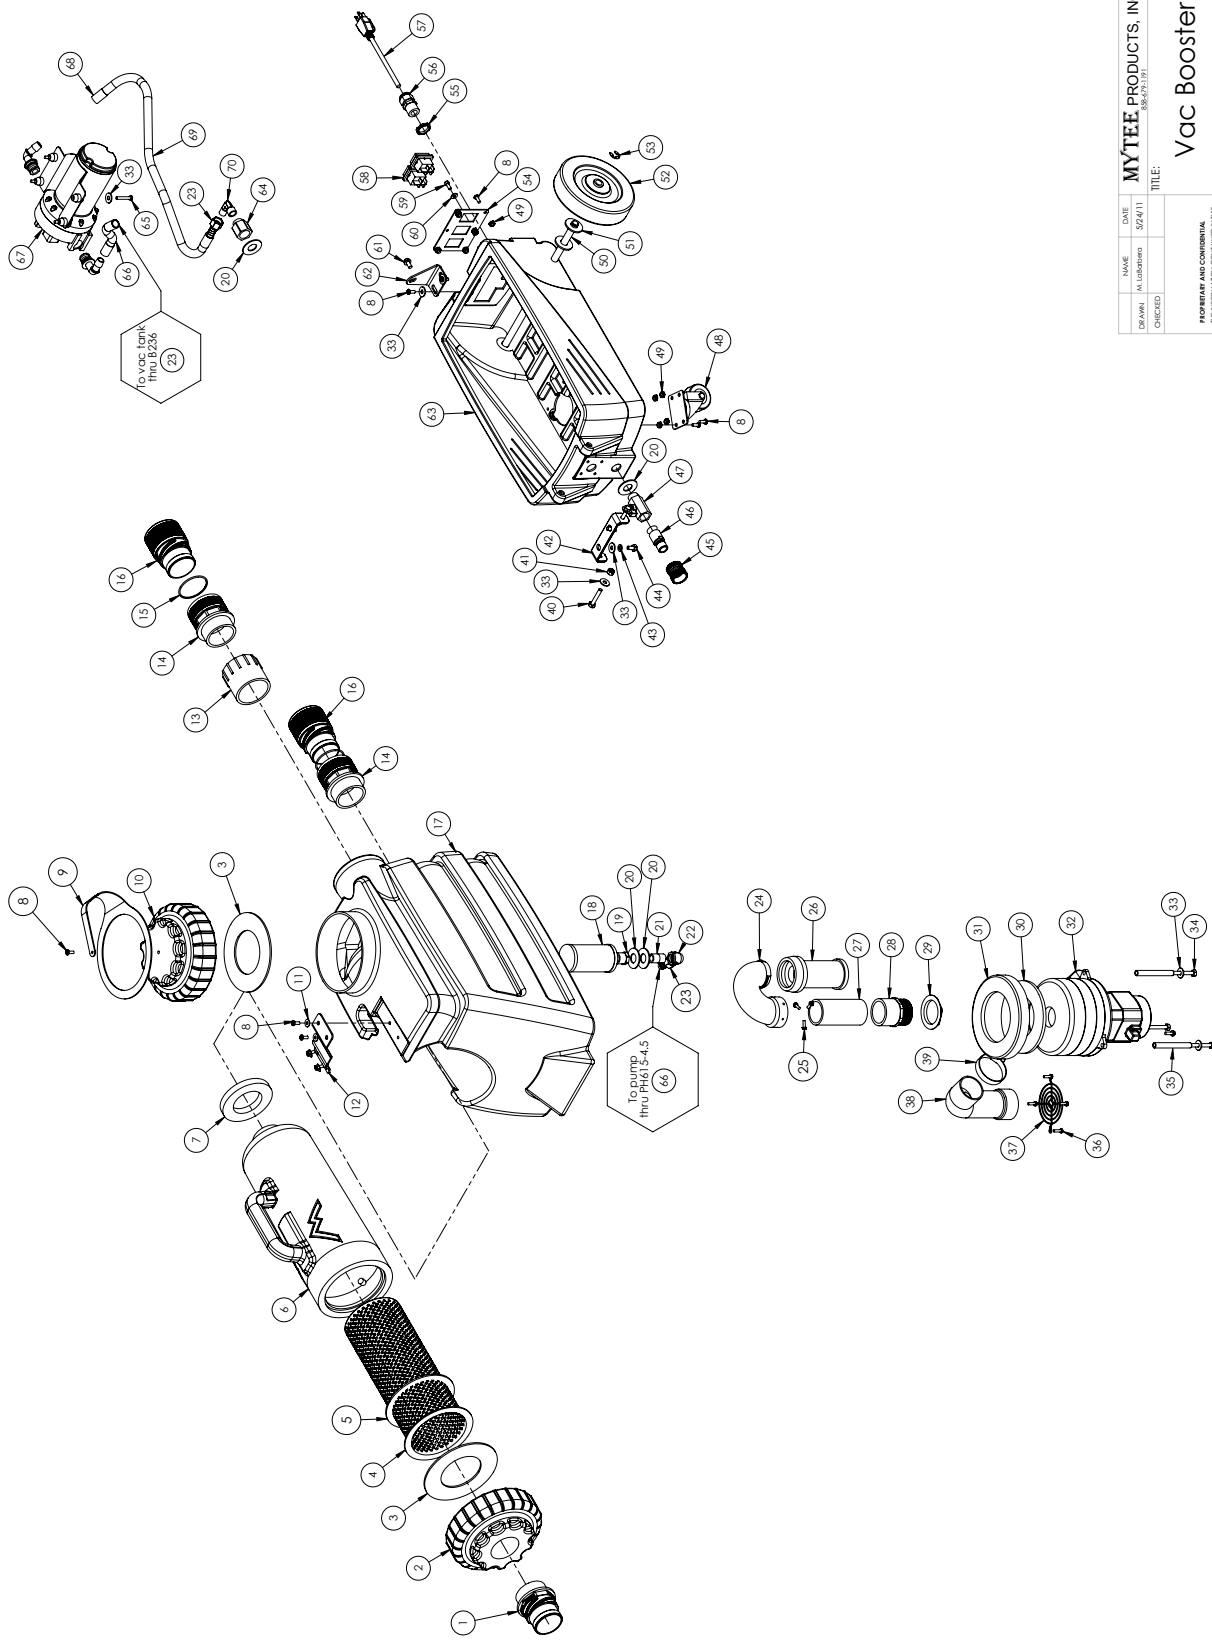

DRAWN	NAME	DATE	SIZE
CHECKED	IN LUBRICATION	2/24/11	8.5x11
MYTEE PRODUCTS, INC. TITLE: Vac Booster			
IMPORTANT REMARKS: THE INFORMATION CONTAINED IN THIS DRAWING IS THE PROPERTY OF MYTEE PRODUCTS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF MYTEE PRODUCTS, INC.		SIZE DWG. NO. C 7303 REV E	SCALE: 1:2 SHEET 2 OF 3

7303 AIR HOG™ WIRING DIAGRAM

7303 115 Volt System

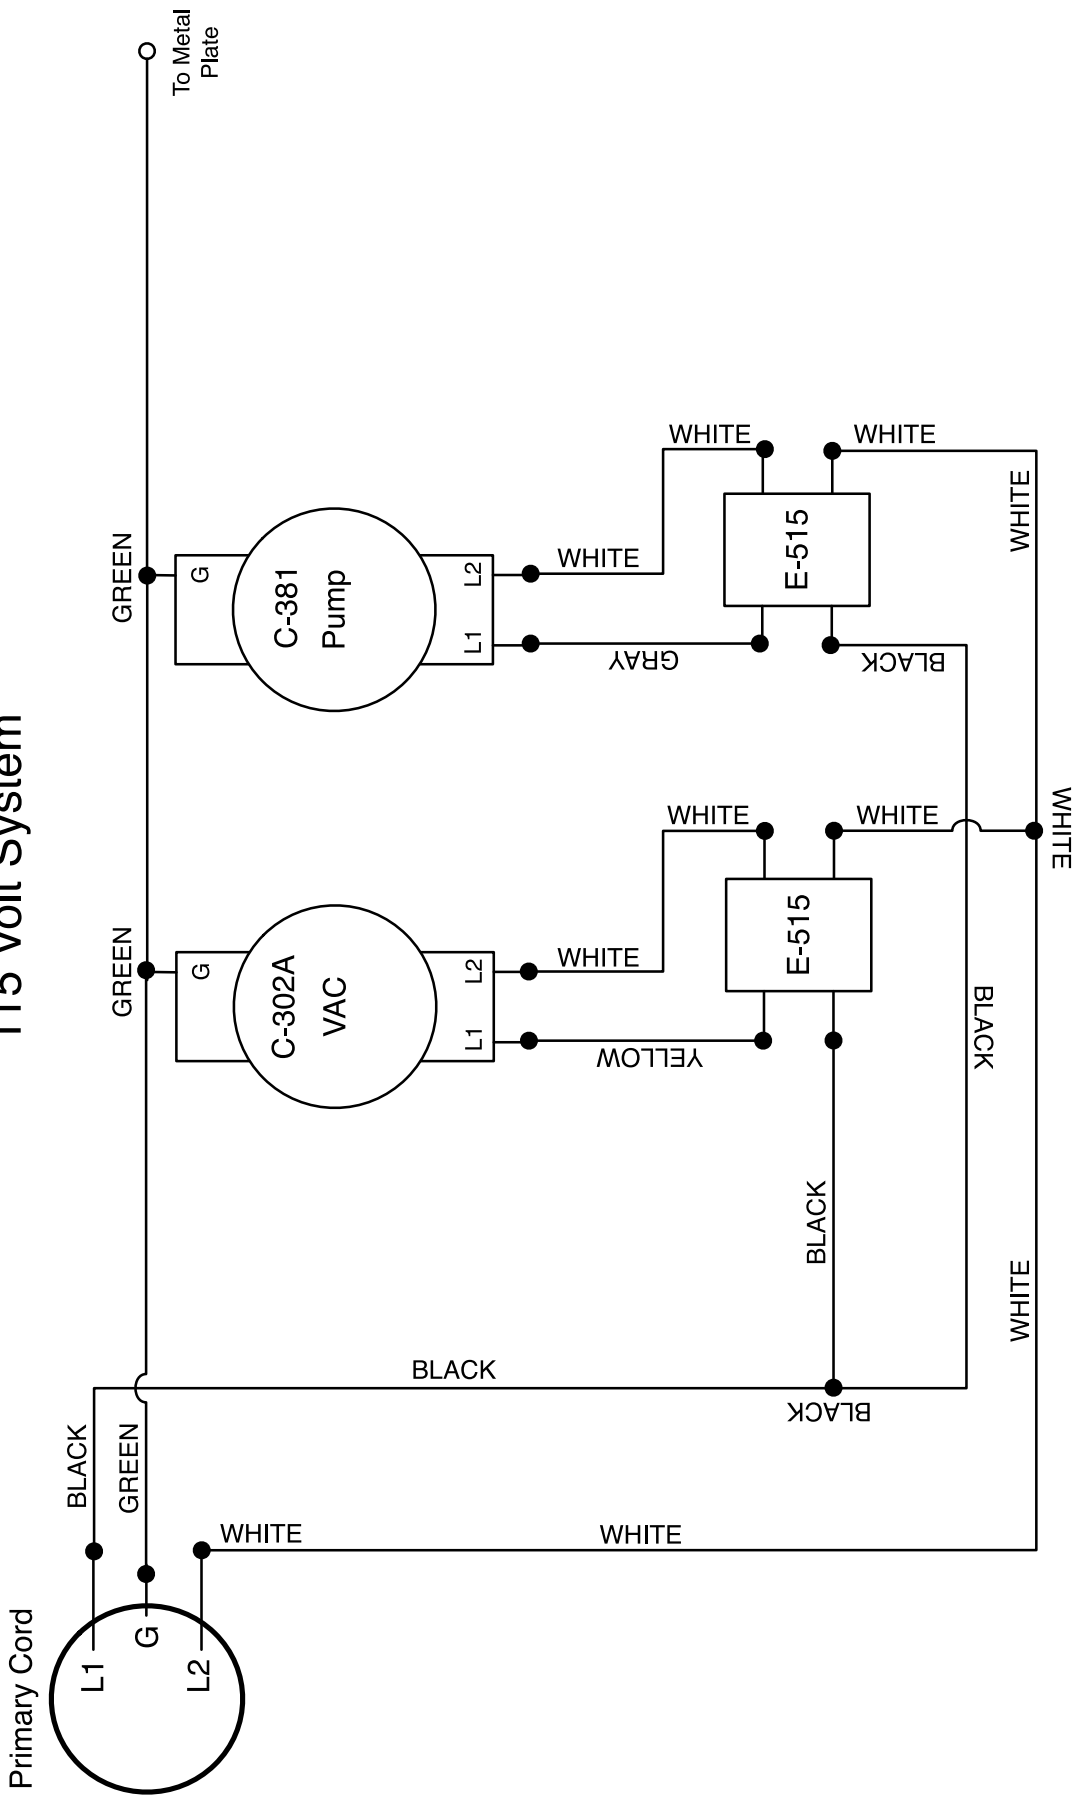

NOTES



Mytee Products Inc.
13655 Stowe Dr.
Poway, CA 92064
www.mytee.com

© 2016 Mytee Products Inc.
Printed in the U.S.A.