


Instructions for 6002 Big B.O.S.S.™



Please read before use.




Register your product at http://www.mytee.com/support/register

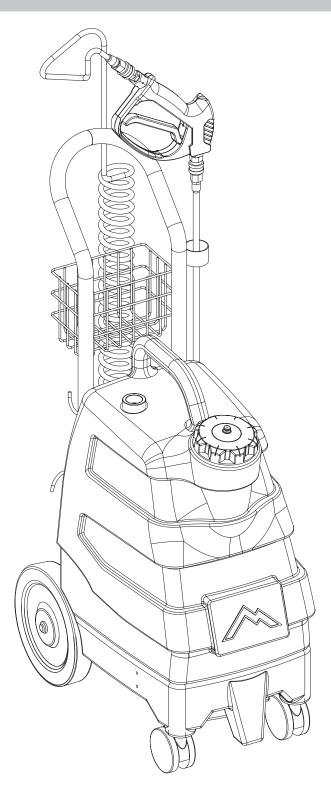



Set up p. 3 General information p. 6 Parts & pricing p. 8 Wiring diagram p. 10 Model # _____


Form # ADP-6002


1-15

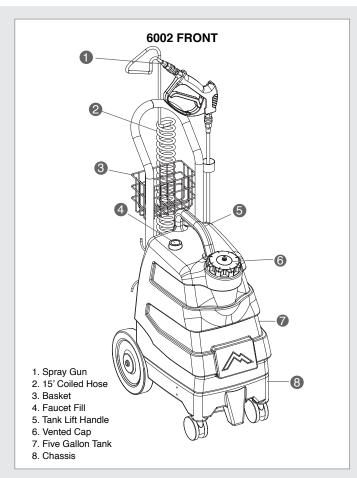

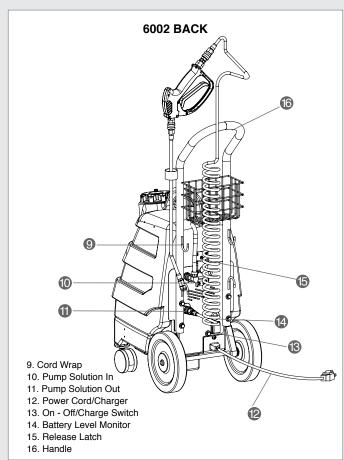

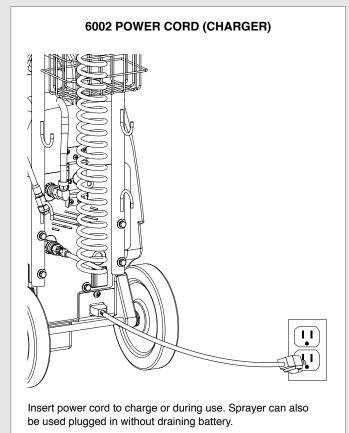


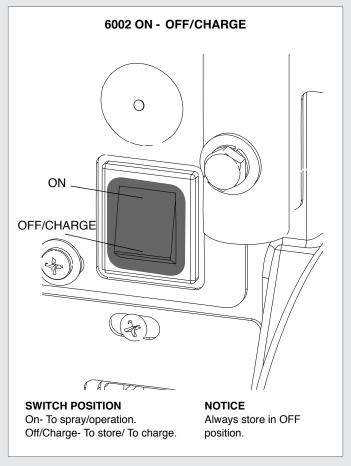


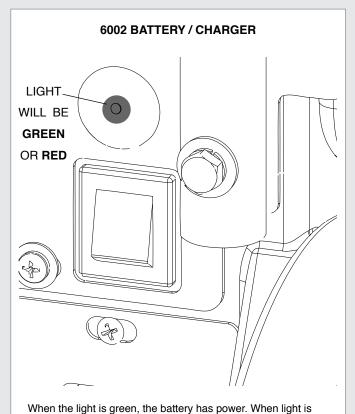


red, the pump will shut off. Also turning off any access to the

battery saving battery life.

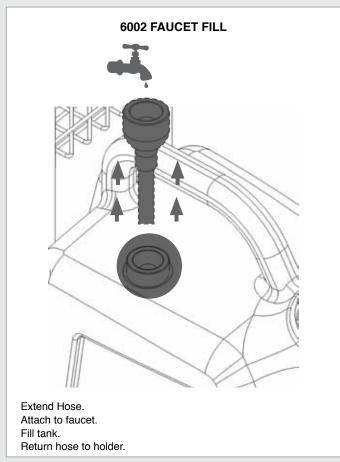

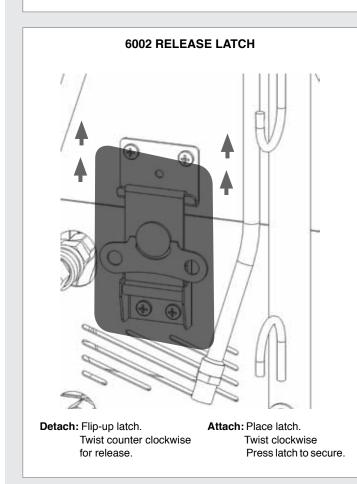

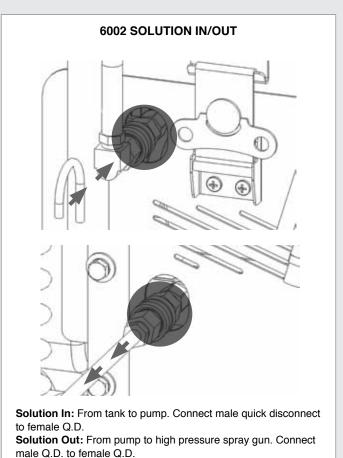



6002 BIG B.O.S.S.™ - SIDEKICK™ SETUP (Sidekick™ sold separately)

SIDEKICK™ ACCESSORY

Add chemical to the Sidekick™ keeping your solution tank filled

with fresh water.

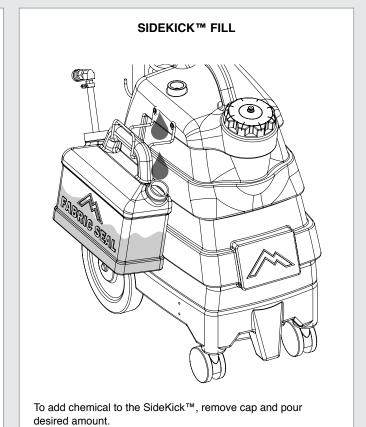

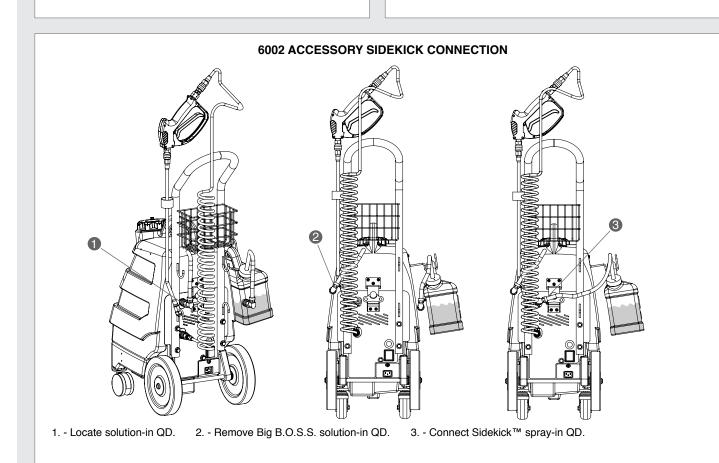

Dear Customer:

Congratulations on the purchase of your new 6002 Big B.O.S.S.™ As you are already aware, the scene of the equipment world is becoming more high tech, and we at Mytee® Products Inc. strive to keep you on the cutting edge with superior quality

Keep in mind that your 6002 Big B.O.S.S.™ is a machine, so neglect or abuse will cause unnecessary damage and void the warranty. However with simple maintenance your 6002 will give you quality performance for many years

If warranty questions arise, please consult your user manual or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee® Products Inc. Service Center. To see an updated list, visit our website at www.mytee.com

Before you begin cleaning, please read your manual thoroughly.

Sincerely,

Mytee® Customer Care Dept.

Grounding Instructions (for recharging battery)

This machine must be grounded when being recharged. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.



Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Figure 1 below. A temporary adapter illustrated in Figures 2 and 3 may be used~to connect this plug to a 2-pole receptacle as shown in Figure 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Figure 1) can be installed by a qualified electrician. The green colored rigid ear, tab or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. Grounding adapters are not approved for use in Canada.

Replace the plug if the grounding pin is damaged or broken.

The Green (or GreenYellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.

Extension cords connected to this machine should be 12 gauge, three-wire cords with three-prong plugs and outlets. DO NOT use extension cords more than 50 feet (15 m) long.

Please Note for America use only

 


Figure 1

Figure 2

Figure 3

Parts and Service

Repairs, when required, should be performed by Mytee® service personnel or Mytee® authorized Service Center using Mytee original replacement parts and accessories. Call Mytee for repair parts or service. Please specify the Model and Serial Number when discussing your machine.

Name Plate

The Model and Serial Number of your machine are shown on the Nameplate on the back panel of the machine. This information is needed when ordering repair parts

for the machine. Use the space provided on the front cover to note the Model and Serial Number of your machine for future reference.

Unpacking the Machine

When the machine is delivered, carefully inspect the shipping carton and the machine for damage. If damage is evident, save the shipping carton so that it can be inspected by the carrier that delivered it. Contact the carrier immediately to file a freight damage claim.

Caution and Warnings

Symbols

Mytee® uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel



DANGER

Is used to warn of immediate hazards that will cause severe personal injury or death.



WARNING

Is used to call attention to a situation that could cause severe personal injury.



Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.



WARNING

To reduce the risk of fire, electrical shock, or injury:

- 1. Read all instructions before using equipment.
- 2. Use only as described in this manual. Use only manufacturer's recommended attachments
- 3. Always unplug power cord from electrical outlet before attempting any adjustments or repairs
- 4. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 5. Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
- 6. Do not run appliance over cord. Keep cord away from heated surfaces.
- 7. Do not use with damaged cord or plug. If cord is damaged, repair immediately.
- 8. Do not use outdoors or on wet surfaces and or standing water.
- 9. Always unplug or disconnect the appliance from power supply when not in use.
- 10. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 11. Do not use in areas where flammable or combustible material may be present.
- 12. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
- 13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
- 14. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
- 15. Use extra care when cleaning on stairs.
- 16. To reduce the risk of fire or electric shock, do not use this machine with a solidstate speed control device.
- 17. The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
- 18. When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.
- 19. Do not leave operating unattended.

Filling the Solution Tank

- 1. Fill the solution tank with 5 gallons of cleaning solution.
- 2. Do not fill up the solution tank completely: 1" should be left free at the top.
- 3. Typically, the solution should be a mixture of water and a cleaning chemical appropriate for the type of job.
- 4. Always follow the dilution instructions on the chemical container label.
- 5. The temperature of the cleaning solution must not exceed 70°C/160°F.



Use only non-flammable liquid in this machine.

After Use

- 1. Turn master switch OFF.
- 2. Empty solution tank and rinse it with clean water.
- 3. Inspect hoses and replace if damaged.
- 4. Inspect solution filter. Clean or replace if damaged.
- 5. Store the machine in a clean, dry place.

Charging

Flip switch to OFF and plug in to a 15 volt outlet.

Maintenance Schedule

Maintenance item	Daily	Once a week
Clean and inspect Tanks	х	
Clean and inspect Hoses	Х	
Check filters	х	
Check power supply cable	х	
Check spray nozzles		х

Replacement

B301 Lance

B258A Jets

5033 Tether Cap

H688 Push Handle

C391 Pump

B302 Jet Housing

H540 Gun

AH107 Coil Hose

E385 Battery

E386 Charger

E516 Switch

B259 Quick Disconnect

B259A Quick Disconnect

B260 Quick Disconnect

B260A Quick Disconnect

Trouble Shooting

There is no power. Weak pressure.

- 1. Battery needs to be charged.
- Obstruction or blockage in the solution line.
- 3. Check jets and filters for debris.
- 4. Bad switch.


Accessories

P532 Sidekick

6002 BIG B.O.S.S.™ PARTS & PRICING

U	U			·	—). \	J .		ш		\			u		וחו			—	V				U								8							∢			
													€																		ート										DOWN M.Lébres 2/2014 MYtee PRODUCTS, INC.	TILE: RICE BACK	ROPHIDAY NO CONTEXTUL. THE WHILD SAN TO SECURIOUS THIS GRAPH SPORT OF STATE OF STAT	6002	SCALE: 1:4 soutonwing SHEET 1 OF 3
		QTY. MSRP	-	-	1 \$1.99/ft	1 \$4.99 ea	2 \$0.99 ea																																						
	HOWN	DESCRIPTION	stop sign, register your product	manual, big boss	tubing, pvc, 1/2" O.D. x 3/8" ID	gasket, strip, 3/4" x 36" x 1/8"	plug, 7/8", black, heyco																																						
	ITEMS NOT SHOWN	PART NO.	AD125	ADM-6002	PH612-48	G085	H423																																						
	MSRP	\$55.99 ea	\$15.99 ea	\$8.99 ea	\$3.19 ea	\$41.99.64	\$4.49 ea	\$6.25 ea	\$10.49 ea	\$61.99 ea	\$0.99 ea	\$13.99 ea	\$47.99 ea	\$0.99 ea	\$0.99 ea	\$0.99 ea	\$0.99 ea	\$0.99 ea	\$28.99 ea	\$3.49 ea	\$8.49 ea	\$4.49 ea	\$136.99 ea	\$0.99 ea	\$27.99 ea	\$46.99 ea	\$0.99 ea	\$0.99 ea	\$9.99 ea	\$0.99 ea	\$13.99 ea	\$4.99 ea	\$36.99 ea	\$92.99 ea	\$7.99 ea	\$5.99 ea	\$10.99 ea	\$1.99 ea	\$7.99/ft	\$1.99 ea	\$3.99 ea				
į	QTÝ.	-	2	2 -			- m	-	1	-	7	-	- <	1 4	- 6	5	-	2	2	- ~	2	3	-	80		-	2	2	2 -	- 4		-	1	-	-	- -	- -	- 2	-	2	-				
	DESCRIPTION	sol hose, black coil 15' 1/4 m x 1/4 m	qd, brass, 1/4" fqd × fpt	qd, brass, 1/4" mqd x fpt	busning, brass, 3/8 mpt x 1/4"	gun, nign pressure, (batt spray/ counter)	coupling, brass, 1/4" fpt x 1/4" fpt	v jet, brass, 6506, 1/4 male thread	qd, brass, 1/4" mqd x fpt	handle, w/basket w/tube ring	screw, 10-32 x 1/2" phil pan head, s/s	latch, front	plate, cover, back, boss	screw, #0 x 3/0 pm oval, 3/3 washer: #10 flat: black	washer, 1/4" flat, s/s	washer, 1/4" lock, s/s	bolt, 1/4-20 x 1/2", hex head, zinc	cap, axle, 1/2"	wheel, 8"	adapter, brass, extender, 1/4" mpt x 1/4" fpt, hex	elbow, brass, 90 deg, 3/8"mpt x 1/4"mpt	elbow, brass, 90 deg, 1/4"mpt x 1/4" fpt	pump, 60psi, 12V, 1 GPM	bolt, 1/4-20 x 1-1/4"	chassis, big boss	controller, battery status	screw, 10-32 \times 1 1/4", phil flat full thread	washer, 1/2" flat, s/s	caster, swivel, stem, 3" w/lock	axle, 13.10 x.50 dta flat washer 9/16"ID x 11/16"OD	switch, rocker, 2 position	bracket, brace, battery, boss	battery, 12V, 10AH, battery sprayer	charger, 12V, w/cord battery sprayer	cover, charger, boss	cap, tethered, vented, 3.5"	taucet IIII tank big boss	adapter, brass, 3/8" barb x 1/4"mpt	sol hose, 3/8" kuri 150psi	clamp, hose, 5/16-29/32	filter, strainer, 1/4"				
		sol hose, k			1 14	dun,														9																									
					5105 LE40			B258	B260	Н688	H230	H486	H773	H289B	H210	H213	H201	H219	H239			B103	C391	H203	P545 H273	E388	H185	H876	H240	H228	E515	H776	E385	E386	H772	G033	H1/8	B241	PH715-37	H347	B119				•

6002 BIG B.O.S.S.™ PARTS & PRICING

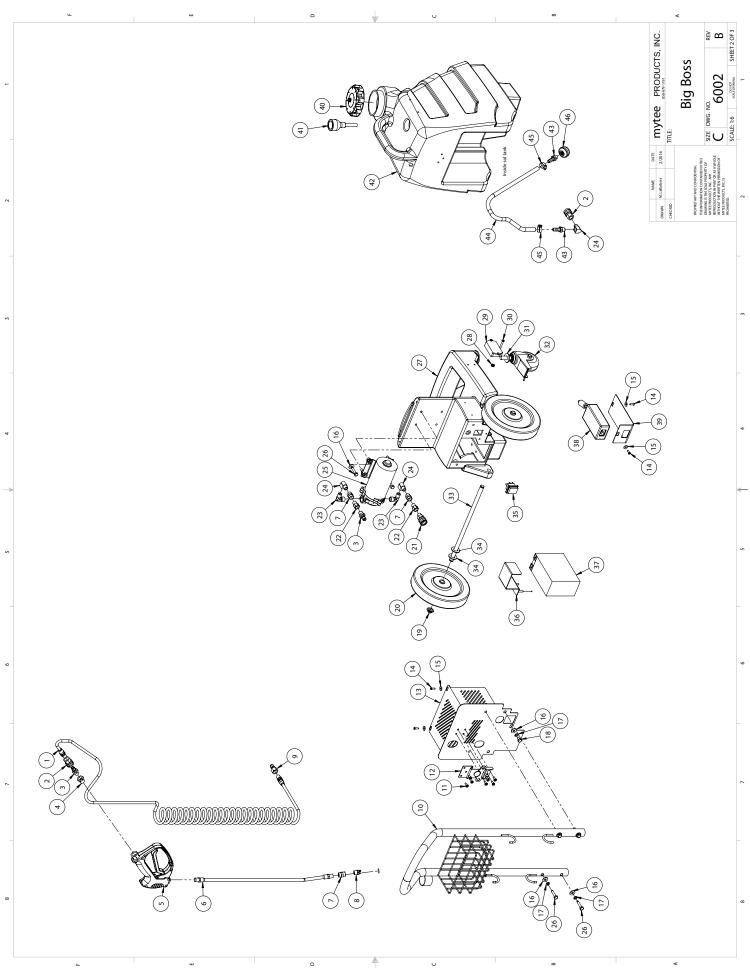

BLUE RED Pump Switch BLUE BLACK BLACK 12 Volt DC Pump C391 BLACK 6002 - Battery Sprayer BED RED BLUE RED **BLACK** RED **Control Board** LED E388 BLUE Battery Charger Cord BLACK BLACK Battery Charger BLACK BLACK BLACK RED W(+) B(-) 12 volt DC Battery BLACK BED BLACK BED

NOTES

NOTES



Mytee® Products Inc. 13655 Stowe Dr. Poway, Ca. 92064 www.mytee.com © 2015 Mytee® Products Inc. Printed in the U.S.A.