



# How To SERVICE AN RO SYSTEM

Your Filters Should Be Changed every 6 Months, Here's How:

**Be sure to turn Power OFF**  
**Turn Water feed OFF**

**Tools you will need:**  
**2½ Pliers**  
**Plumber's Wrench**



Unscrew the PreFilter counter clockwise until it comes off. You may need to use a wrench or hammer to get it started.



Take out the old filter and swap with a new one.



Hand tightened back on, then push in the bleeder valve to release excess air, hold until you get water.



Now you need to change the filter in your Membrane. Use 2 wrenches to loosen the nuts on the collar.



After the collar is off, grab the nipple on the filter with your plumber's pliers and turn and pull at the same time.



Once the filter is loose, pull it all the way out and discard.



Make sure the O-ring seal is on the Top of the filter while inserting.

Insert your new filter into the membrane. Be sure the O-ring seal is at the TOP when inserted.



Inspect O-ring seal on cap, replace if needed.

Before placing the cap back on, check the O-ring seal on the cap and replace if needed.



Push the cap down until it seats itself. Then put the collar back on. Turn water and power back on.