

DX200D INSTALLATION AND PROGRAMMING

WIRING

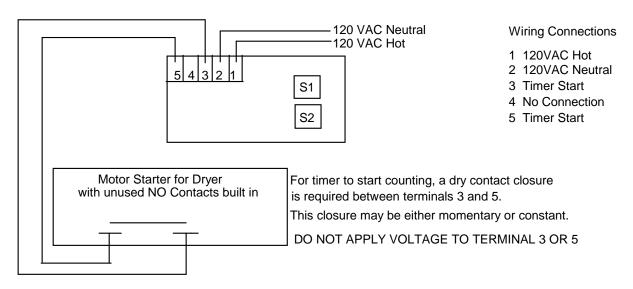

Other timer start connections

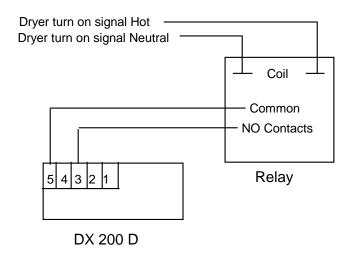

120 Volts Applied when Dryer starts 120 Volt Hot 120 Volt Neutral Jumper 3 & 5 5 4 3 2 1 DX 200 D

Timer will be dark when not in use. When Dryer starts timer will light up and start counting down.

PROGRAMMING

Digits are individually set as follows:

S1 Adjusts seconds individually (right digit)

S2 Adjusts seconds by 10's (left digit)

Example: To set display to show 90 seconds: Set S2 to '9' Set S1 to '0'

DIXMOR ENTERPRISES 5755 S. GALLUP ST LITTLETON CO 80120 303-794-0597