




1.877.247.5644

1621 N. Stone Ave.
Tucson, AZ 85705

www.AirLogicCarWash.com

airlogiclowpressure@gmail.com

Low Pressure Board Diagram

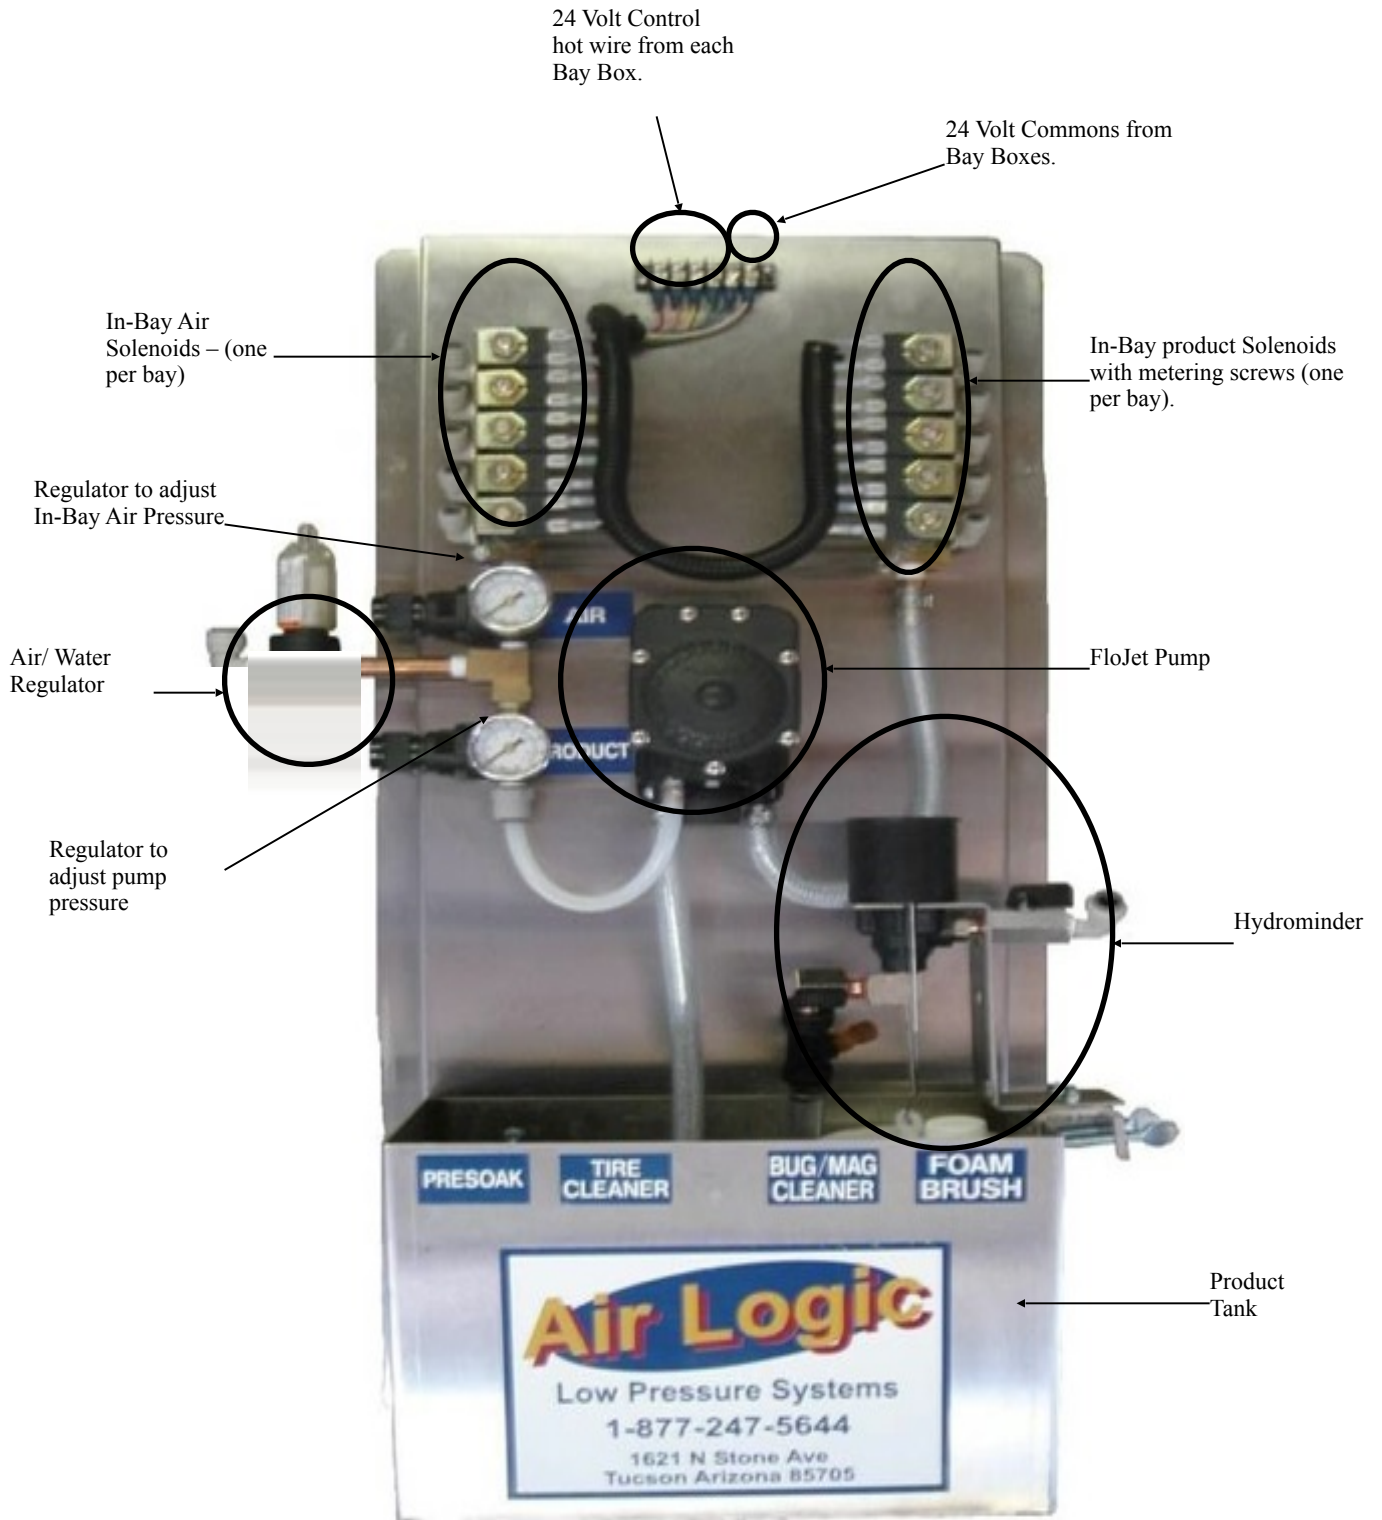

Pre-Soak - Tire/Motor - Foam Brush Panels Installation

1. Install air/water separator on control board
2. Attach panel to wall
3. Attach product and air tubing to solenoids from bays
4. Connect air line to board (100 psi max.).
5. Connect water supply to hydrominders – approximately 40 psi.
6. Bring a 24 volt hot (designated wire for that function), and a 24 volt common from each bay to the wiring strip on panel.
7. Suggested start-up settings:

Foam Brush

Air	30 to 35 psi
Product	45 to 55 psi
Metering screws	2 to 3 turns

Tire Motor

Air	20 to 25 psi
Product	30 to 40 psi
Metering screws	$\frac{3}{4}$ to 1 turn

Pre-Soak

Air	25 to 30 psi
Product	45 to 55 psi
Metering screws	2 to 3 turns

For further instructions please call (877) 247-5644 for tech support.